## OMRON

# Machine Interface

NA Series



Bringing technology to life




# Sysmac - the family that matches every requirement

As part of the Sysmac automation platform, Omron NA HMI transforms machine data into information, shows information and controls devices based on requirements at FA manufacturing sites.

The NA Series enables faster, more efficient control and monitoring.

With a widescreen displaying 16,770,000 colors, the HMI that is dynamic, intuitive and predictive makes industrial machines more attractive and competitive.



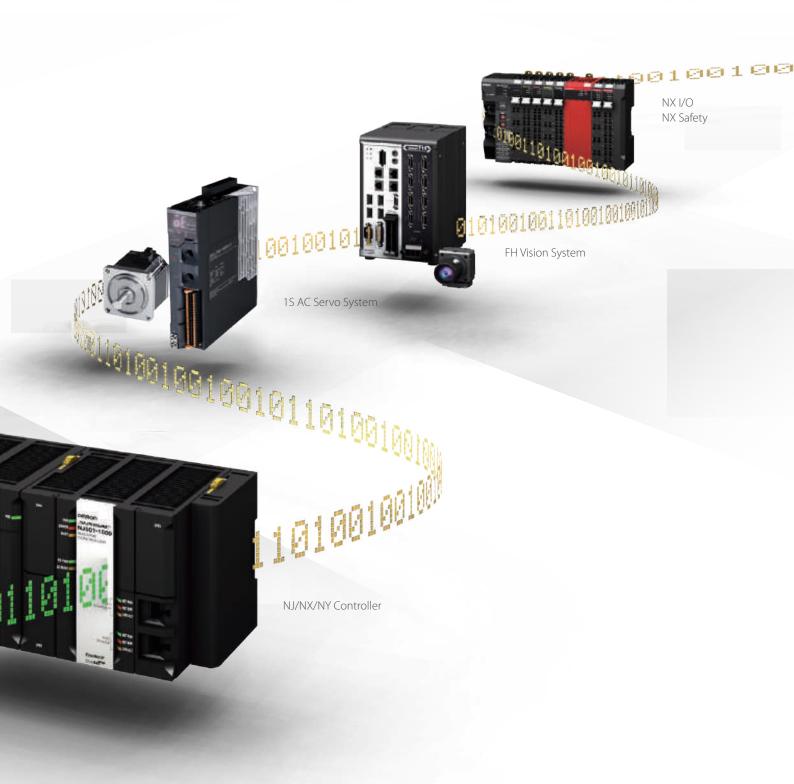

# Integrating your world

The Sysmac Studio is the centerpiece of the Sysmac platform, bringing together all areas of automation including: logic, motion, vision, safety and visualization.

The NA Series can be programmed alongside the other devices in one integrated project, which speeds up development.

### **ONE Tag Database**

- Share NJ/NX/NY Controller Variables (Tags) in the machine interface application.
- Variables shared with controller reduce the time and complexity of programming.
- Define/use NA data structures in the machine interface application



### ONE Learning, ONE Project

- Program your controller and safety systems
- Simultaneously program the NA Series as device in Sysmac Studio
- · Program your whole machine in one project
- Work in a familiar way on all devices

### **Editors in ONE**

• Display both controller and HMI editors on one screen for quick design.

### Safe and secure

Configure individual users with multi access levels

### SIMPLE

- Clearly and quickly define the View
- Quickly change properties, animations, events and actions
- Powerful page editor to group objects
- Rotate, and resize all with a simple click

### **BUT STILL FLEXIBLE**

- Write your Visual Basic Script
- Extend the possibilities with Visual Basic

### Test it in ONE

- Integrated testing through simulation of programs on controller and HMI at the same time.
   Checking your device operation at the same time makes debugging quicker and easier.
- Quickly test your device operations via the Simulator.

### Features for speed

- Structured programming (through One software)
- Network device insight
- Vision setup
- Machine Controller troubleshooting

### Keep Machine Running - Minimize downtime

If something unexpected happens in your machine, it is crucial to identify the cause and solve the problem quickly. As part of the Sysmac automation platform, the NA Series helps minimize machine downtime.

### Troubleshooter

The Troubleshooter on the NA Series allows you to directly monitor and release the NJ/NX/NY Controller errors and events as well as the user-defined errors and events. There is no need for support software running on a PC.



### Safety Monitor

The NA Series can directly access safety CPU units and safety I/O units, which was previously impossible. There is no need to create any special screen to monitor their device variables and I/O settings.


The I/O Matrix Monitor displays device variables and external exposed variables used in safety programs, allowing you to see outputs (error state) and corresponding inputs (causal condition).




The Safety Input/Output Unit Monitor shows the ON/OFF status of safety I/O units and information on components connected to individual I/O terminals, enabling efficient monitoring of the entire system including safety components.




### Safety CPU unit

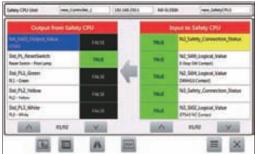

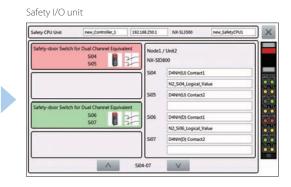

### Logging and displaying operations

The system events that the NA Series detects and the operations that operators perform on the HMI can be logged. The logs can be displayed on the NA Series, and can also be saved as CSV files to display them on your PC. You can see who and when did what in a chronological order, helping you analyze errors.

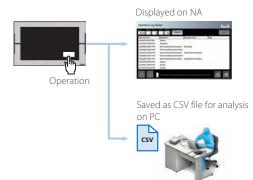

### Remote access

- You can view and operate the HMI installed at production sites from your tablet using Ethernet or WiFi.
- The access of remote devices can be managed and limited. This helps prevent accidental operation and information leakage, while securing accessibility.



Two devices (A, B) are accessing.

### Increased security

The NA Series can be configured to specific staff, with multi access levels with password protection.

This ensures authorised people interact with the machine.




### Protecting your assets

- Your project can be password-protected along with other applications (Control and Safety).
- Transferring data can be protected (disable overwrite or theft).

# Simple, but Flexible!

The NA Series gives the user the ability to design using IAGs (Intelligent Application Gadgets). IAGs simplify and accelerate the development process through structuring the project and enhancing reuse. From simple graphics to complex objects, you can make your own collections and share them between projects, like a Function Block.

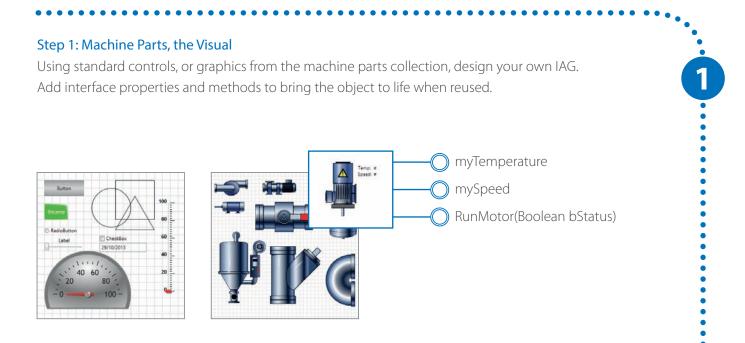

'IAC	5 Code behind - Add local subroutines for the IAG.
Pub	lic Function RunMotor(bStatus As Boolean) As Double 'start motor at default speed mySpeed = 50 'return current speed RunMotor = 50
End	Function
Pub	<pre>lic Function IncreaseSpeed(nIncrement As Integer) As Double ' Increase speed by increment if &lt; 1000 If mySpeed + nIncrement &lt; 1000 Then</pre>
	Else 'Otherwise set to top speed mySpeed = 1000 End If
	'Return new speed IncreaseSpeed = mySpeed

### Step 2: Extensible with Visual Basic

As well as many graphic IAGs, it is also possible to embed code within an IAG. The code can extend the possibilities of the gadget such as providing special device communication. Thanks to Visual Basic the standard functionality of the NA can be extended as required.




•

### Step 3: Publish and Share


When the IAG is built and tested (using simulation) it can be published and the collection file distributed to be used again and again. Omron will release further IAG collections to extend the functionality of the NA Series.



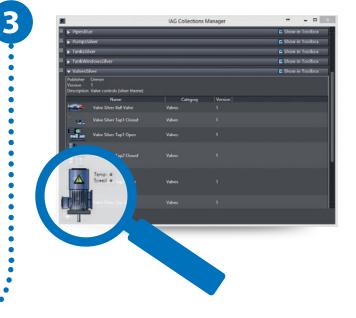

# A range of options that covers every need

### NA5

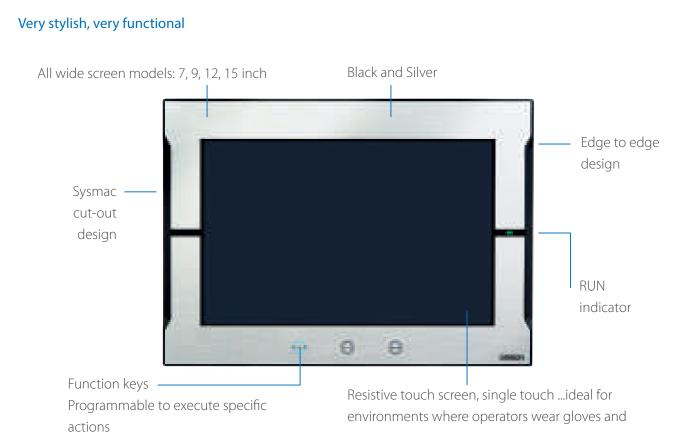

water proof is needed

### Widescreens displaying 16,770,000 colors



### Soft-NA


### HMI functions work on Windows to flexibly suit various on-site applications

Soft-NA provides equivalent functionality to NA5. This Windows application can be used with a wide variety of hardware including a large monitor and environment-resistant monitor, quickly meeting changing users' needs. Soft-NA runs on an industrial PC or a PC, which allows you to run both your own data collection program and Soft-NA on a PC. Visualization of machine data helps reduce downtime.



### One Software, Sysmac Studio, manages all program assets

The advantages of the integrated development environment, such as sharing NJ/NX Controller variables and integrated Simulator, can be used on Soft-NA. Soft-NA also provides the same NJ/NX Troubleshooter as NA5, assisting in minimizing machine downtime. In addition, if you have screen data for NA5, it can be easily converted into screen data for Soft-NA.

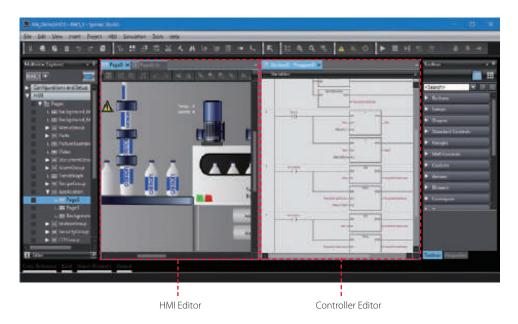

### SHOW your machine - Greater visualization

### More than 16 million display colors (24-bit full color)


High-resolution bitmap graphics<sup>\*1</sup> and 67 different types of fonts can be used to create intuitive and good-looking screens. In addition, DXF files are supported to display CAD data. Even if the drawing is enlarged or reduced in size, it never loses quality.



\*1.Contact your Omron representative to obtain Cool Objects.

### Indirect reference of text strings

A text string that is displayed on a label object (1 line) or a text box object (1 or more lines) can be switched by indirect reference. The machine operating status and alarm details can be easily displayed.

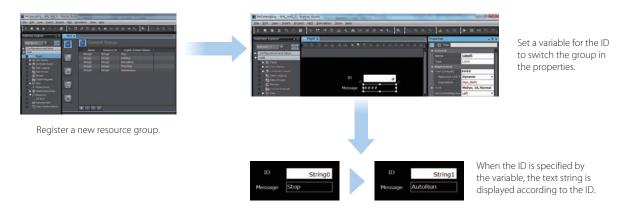


### Tab control

A part of the screen can be used like a notepad.

Up to 64 tab pages for a Tab Control object can be created, and up to 10 Tab Control objects can be placed on a screen.

Change a tab page instead of a screen to monitor/ change various data.

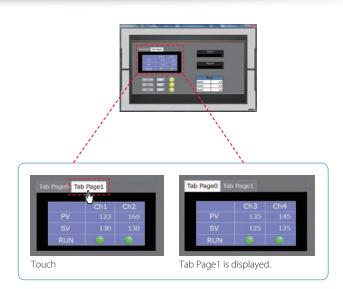


### Setting, sorting, and filtering alarms

Alarms can be set easily, reducing time and effort required for creating alarm screens.




You can "sort" alarms by the preset item and "filter" by any keyword.

The error location can be quickly identified from a large number of alarms.

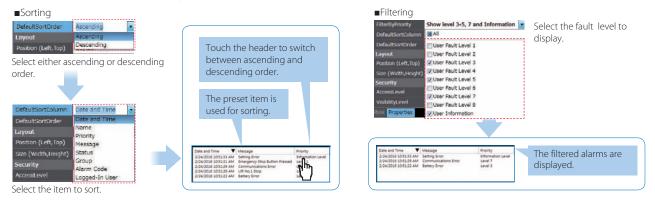


### Scaling

Scaling can be set for Data Display/Data Edit objects and global variables. Values of variables can be converted by specifying conversion expressions, which makes it easy to show data in the controller.

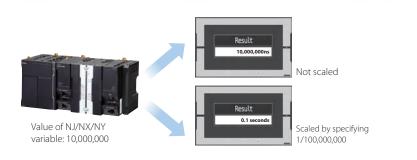

### Broken-line graphs

Data of variables and multidimensional arrays in the controller can be displayed as brokenline graphs. Broken-line graphs can also be created from the data in the CSV files saved in the SD card inserted in the NJ/NX/NY Controller by using subroutines (Visual Basic). You can specify the display range of large array data, such as operation log, by setting the offset value.

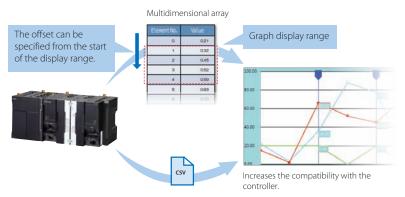

### OPERATE your machine - Comfortable to use

### Supporting Asian languages

An Asian language - Japanese, simplified Chinese, traditional Chinese, or Korean - can be selected to use in the keypad of the NA Series.

The keypad language changes automatically when the language is changed in the language settings.


Local languages can be used to input the names of products when new recipes of the food packaging machine are added.



### Executing a subroutine with multiple threads

Some subroutines require time due to repeated processing or waiting time.

Even such a subroutine can be executed during screen update, without affecting operability and visibility.

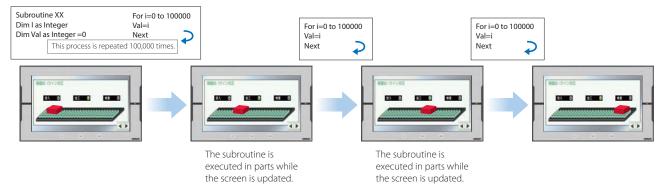

### Page jump from user alarm

The page to switch can be specified in each alarm setting. When an alarm occurs, you can check the troubleshooter screen by selecting the displayed alarm.

Group0	×							
Group Displ	ay Name							
Name	Alarm ID	Alarm Code	Expression	Priority	Message	Popup	Acknowledge	
A1	Group0_A1		Alarm1=True	User Fault Level 1	Alarm1			Page6
A2	Group0_A2		Alarm2=True	User Fault Level 1	Alarm2			Page5
A3	Group0_A3		Alarm3=True	User Fault Level 1	Alarm3			Page4
	Group0_A4		Alarm4=True	User Fault Level 1	Alarm4			Page3
A5	Group0_A5		Alarm5=True	User Fault Level 1	Alarm5			Page2

The page to switch can be specified in each alarm setting.



### Customizing keypads and resizing objects

You can change the keypad size, choose only the keys you need, and customize the keys to execute specified actions. Create your own keypad suitable for your applications.

The size of the Check Box, Slider, and Radio Button objects can also be changed. You can greatly improve the usability of your machine by enlarging these objects in size.


### Custom keypads



Changing the keypad size The size can be changed to suit the user's needs.



Creating user's own keypad Only the keys the user needs can be chosen, and the keys to execute specified actions can be customized.



**Resizing objects** The properties of the object size are added. You can resize the objects suitable for your application.

### Dynamically changing upper/lower limit value

The upper and lower limit values can be dynamically changed by setting variables as maximum and minimum values of a Data Edit object. It is possible to restrict input according to the status of the machine.


Set variables as minimum and maximum values



### Specifying a page number

By assigning any number to the page, you can easily switch pages from the PLC.

The previously required subroutine is no longer needed for this operation. This feature is particularly helpful when you use the CJ PLC in which pages are frequently specified by number.\*<sup>1</sup>

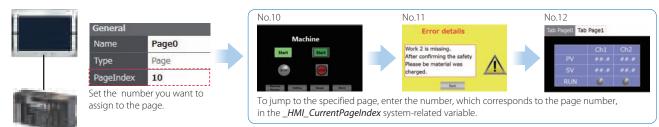


### Usability: Design - Simple screen design

### Integrated development environment

Sharing data between the NA Series and the NJ/NX/NY Series in real time on the Sysmac Studio increases design productivity.

### Displaying editors on one screen


The NA HMI Editor and NJ/NX/NY Controller Editor can be displayed on one screen. This eliminates the need to switch between screens, making the design easier and faster.

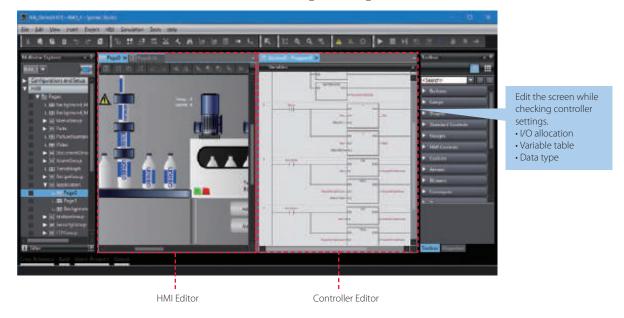

### Concurrent development of ladder and HMI

Device data of the NA Series can be imported from and exported to the project file.

When the controller designer and HMI designer develop a machine concurrently, the screen data can be merged with the controller project.

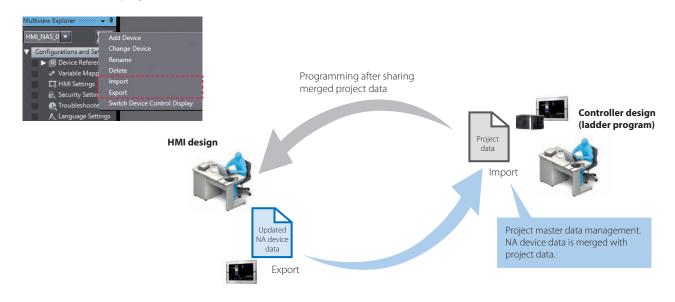

### Adding an object by drag & drop

Just drag a variable from the Ladder Editor in the NA Page Editor to add an object. The variable is automatically set in the property of the added object.\*


This eliminates the need to create and allocate HMI variables, which facilitates design work.



\* When an input is selected, a Button object is added automatically. When an output is selected, a Lamp object is added automatically.

### Improved mapping of controller variables to NA Series

- NJ/NX/NY Controller variables can be automatically mapped to the NA HMI. This improves design efficiency and ensures that all added variables are mapped.
- The device name generation rule can be customized in manual mapping. Variables can be mapped according to your desired rule.

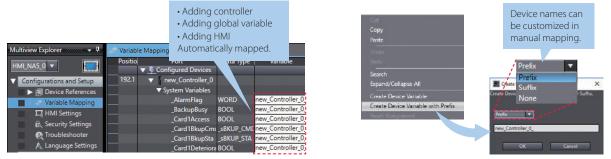

### Easy to add NA variables to controller

Variables added to the NA HMI can be registered and mapped to the controller variable table from the properties for objects or the NA global variable table.

Going back to the controller global variable table to add variables is no longer required, saving your design time.

From NA global variable table	
Global Variables ×	and Global Variables ×
Auto_Run Create New	Name Data Type
ErrorBit	FileName STRING[256]
Parte	UppData2 INT
PV2 Delete	LowData2 INT
311	Auto_Run BOOL
	Add to the controller g variable table
	Global Vanables ×           Name         Data Type           Auto_Run         Create New           PageIndex         Cut           Error/Bit         Copy           PV1         Paste           PV2         Delete

### Resource management

Helps install your machines globally and modularize design.

### Language Settings

- Different fonts, sizes, and styles can be set for different languages. You can use your specified fonts or fonts suitable for local languages. Also the font of a specified object can be changed according to language.
- The default language can be changed. Properties and alarm groups, as well as screens, are displayed in local language, which makes design faster and easier.

	Language List								
Default languag	Project Languages c Japanese (Japan)	System Languages Japanese (Japan)	Software Keypads Standard	Transfer to Device	FontFamily Meiryo Ul	FontSize	FontSty Normal	1e	Different fonts car be set for different
	English (United States)	English (United States)	Standard	<b>1</b>	Segoe UI	10	Bold		
	Chinese (Simplified, PRC)	Chinese (Simplified)	Standard		Arial	9	BoldItalic		languages.
	Korean (Korea)	Korean (Korea)	Standard		MS Gothic	13	Italic		
				▼ Font	Japanese (Japan)	Meiryo UI, 1	2, Normal		
				▼ Font	Japanese (Japan)	Meiryo UI, 1	2, Normal		
	Select the default language by clicking		ont of the specified		nily	Meiryo UI, 1 Meiryo UI	2, Normal •		
	Select the default language by clicking the ↑ or ↓ Button.		ont of the specified t can be changed.	Far Siz Sty	nily e /le	Meiryo UI	2, Normal *		
	language by clicking			Far Siz Sty	nily e	Meiryo UI 12	•		
	language by clicking			Fai Siz Sty ▼ En	nily e /le	Meiryo Ul 12 Normal	•		
	language by clicking	object	t can be changed.	Fau Siz Sty ▼ En	nily e rle glish (United States)	Meiryo Ul 12 Normal Segoe Ul, 10	•		
	language by clicking	object 1	t can be changed.	Fai Siz Sty ▼ En	nily e rle glish (United States) Family	Meiryo UI 12 Normal Segoe UI, 10 Segoe UI	•		
	language by clicking	object	t can be changed.	Fat Siz Sty ▼ En	nily e de glish (United States) Family Size	Meiryo UI 12 Normal Segoe UI, 10 Segoe UI 10 Normal	• ), Normal •		

### Improved user alarm editing


- User alarms can be exported to and imported from Excel with the same layout as the user alarm table. The table can be sorted or filtered in Excel.
- Both the message and its details are exported to and imported from Excel. They are sorted according to the alarm ID, allowing you to edit text strings while you view all information.

Name   Alarm ID													
		Code Expression		Message	Popup	Acknowledge		Details					
Im1 Group0_Air Im2 Group0_Air		Var1 Var2	User Fault Level User Informatio		<u>⊻</u>	1	Page0 Page1	Detail1 Detail2					
		table with t	he same lay	vout as the alarr	n table can l	be edited e							
		A	В	С	D	E	F	G	Н	I	J	К	L
		Group Name 1	Group Name	2 Group Name 3	Alarm ID		Expression		Message		Acknowledge	Page	Details
		Group0				123	Var1	UserFaultLeve			True	PageO	AString1
	3 (	Group0			Group0_Alm2	999	Var2	UserInformatio	on AString2	True	True	Page1	AString
	The	list of all ala	rm informa	tion can be edi	ted.		E		F				
		A Alarm ID	B Type Res	C Durce Group Name	D Resource ID				anese (Japar	) [ja=JP]			
	1	A Alarm ID Group0_Alm1	B Type Res Message [roo	C purce Group Name t]	D Resource ID AString0	Message1		メッ	anese (Japan セージ1	) <u>[ja-JP</u> ]	]		
	1 2 3	A Alarm ID Group0_Alm1 Group0_Alm1	B Type Res Message [roo Details [roo	C ource Group Name t] t]	D Resource ID AString0 AString1	Message1 Detail1		メッ 詳:	anese (Japar セージ1 ⊞1	) [a-jP]			
L	1 2 3 4	A Alarm ID Group0_Alm1 Group0_Alm1 Group0_Alm2	B Type Res Message [roo Details [roo Message [roo	C ource Group Name t] t] t]	D Resource ID AString0 AString1 AString2	Message1 Detail1 Message2		メッ 詳 ヌッ	anese (Japan セージ1 細1 ・セージ2	) [ia-JP]			
	1 2 3 4	A Alarm ID Group0_Alm1 Group0_Alm1	B Type Res Message [roo Details [roo Message [roo	C ource Group Name t] t] t]	D Resource ID AString0 AString1	Message1 Detail1		メッ 詳:	anese (Japan セージ1 細1 ・セージ2	) <u>[a_JP</u>			
	1 2 3 4	A Alarm ID Group0_Alm1 Group0_Alm1 Group0_Alm2	B Type Res Message [roo Details [roo Message [roo	C ource Group Name t] t] t]	D Resource ID AString0 AString1 AString2	Message1 Detail1 Message2 Detail2 You can	edit both	メッ 詳 ヌッ	renese (Japan セージ1 モージ2 冊2 ges and de				

• Even if alarms are grouped, such as by machine module, all alarms can be imported and exported at once.


### Improved resource editing

• In addition to entering a text string directly in properties, you can assign an ID first and enter a text string later. This resource ID-based management enables you to standardize screens first and then enter all text strings edited in Excel to suit machine specifications.

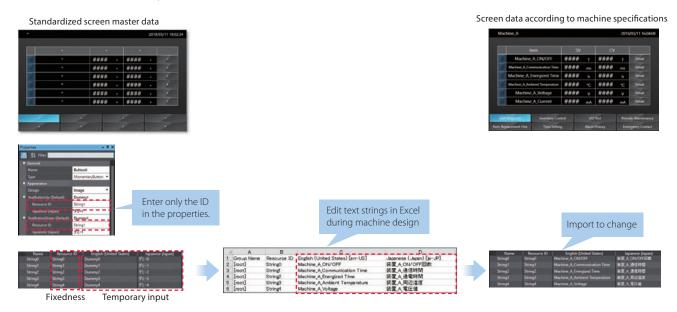

- Even if resources are grouped, such as by machine module, all resources can be imported and exported at once.
- Object properties (e.g., variables and expressions of buttons and lamps, resource IDs, text strings) in all languages on the same page can be imported and exported.

Multiple properties can be edited at once in Excel, making resource editing easier, faster, and more precise.

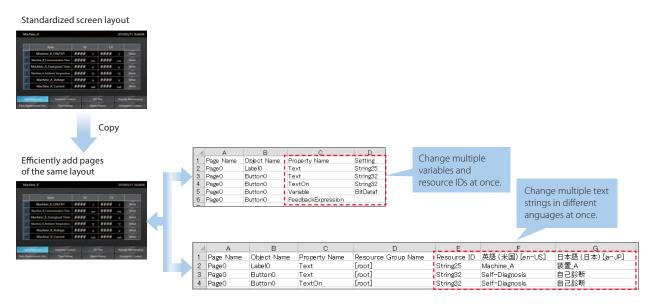


### **Page Editor**

Provides a simple GUI and a full suite of functionality to assist and streamline the design process.

### Importing and exporting pages


Pages can be saved as library files and reused individually in other projects.

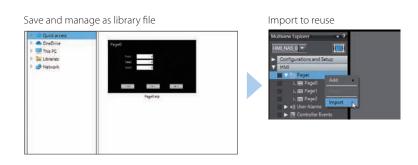

### Changing type of button

The type of the Buttons including Set and Momentary can be changed easily in the properties whenever you want, even during or after designing the Button.

Name	Button0
Туре	Button
Appearance	Button
Design	MomentaryButton ToggleButton
Text (Default)	SetButton
Font	ResetButton



No need to recreate the button to change its type. The settings will be maintained even the type has been changed, reducing the amount of work required for screen creation.


### Buttons with the lamp function

You can easily create Buttons with the lamp function.


•Types of Buttons with the lamp function

Setting	Condition for lightning lamps
Touch(Button)	Pressing Button
Variable(Button)	Variable
Feedback(Button)	Feedback Expression
Touch(Button) +Feedback(Button)	Pressing Button + Feedback Expression
Touch(Button) +Feedback(Indicator)	Button: Pressing Button Indicator: Feedback Expression
Variable(Button) +Feedback(Indicator)	Button: Variable Indicator: Feedback Expression

#### Example

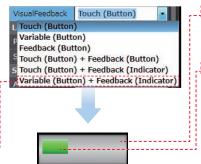

Conceptual figure for setting objects



One object that has both button and lamp functions can be created. This eliminates the need for creating multiple objects, helping create screens faster.

A lamp (indicator) can be set on a button.


### Data input order

The data input order can be set. When numeric values are entered consecutively, the focus automatically moves to the next Data Edit object by touching the Enter key. Input errors and input time can be minimized.





Based on one object, you can create multiple copies with the same appearance and settings by specifying an off set value for an array variable. This makes screen creation faster and easier.

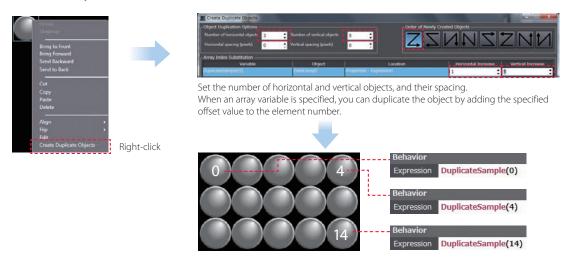

### NA screen capture


The screens displayed on the NA Series can be captured and saved in the SD card inserted in the NA Series or the USB memory connected to the NA Series.

- When a screen of the NA Series is required to create a machine operation manual
- When the current screen is required to save as proof of a trouble

Supported format: PNG

The combination of VNC and FTP allows you to capture the NA screens from the connected PC.


The focus automatically moves to the next object by touching the Enter key.



### Usability: Debugging - Easy and fast debugging in integrated development environment

### **Integrated Simulator**

The NJ/NX/NY Controller Simulator and NA HMI Simulator can be displayed on one screen. You can quickly debug the controller program and the HMI application at the same time.

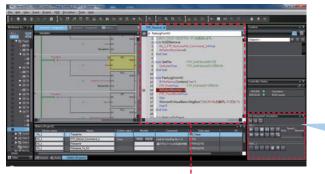

Operations, such as stop and step execution, can be performed for both HMI and controller simulations.

Switchable to the screen for desining.

• You can display the selected page and change properties without stopping the Simulator. Immediate debugging during simulation before building will prevent you from forgetting to correct errors and reduce the frequency of building.

Errors found during simulation can be corrected immediately.



### Watch Tab Page

The same GUI as the NJ/NX/NY Controller is used. Register the variable to monitor/change and then change its value on the Watch Tab Page to easily debug screens with the NA Simulator without the physical HMI.








### **Cross references**

The same GUI for the cross reference function as the NJ/NX/NY Controller can be used.

When a variable is clicked in the global variable table, a list of the locations where the variable is used is displayed in the Cross Reference Tab Page.

By clicking the location, you can access the object, subroutine, or ladder program where the variable is used across the entire project. This makes screen design and debugging quicker and easier.

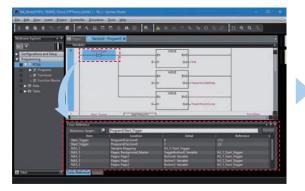

Click the variable in the global variable table to show a list of the locations where the variable is used in the Cross Reference Tab Page.




Click the location to access the object where the variables is used.

### Search and Replace

You can search and replace text strings in all subroutines (Visual Basic), objects, and variables within a project.

It is quick and easy to edit and debug variable names and switch labels.

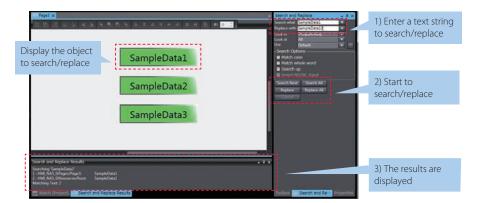

# Programmable Terminal NA Series

### Bringing technology to life

The NA-series Programmable Terminal transforms machine data into information, shows information and controls devices based on requirements at FA manufacturing sites.

The NA Series, together with the NJ/NX/NY-series Controller and the Automation Software Sysmac Studio, allows you to simply and flexibly create sophisticated user interfaces to suit your machines.




### Features


- Widescreen in all models: 7, 9, 12, and 15 inches
- More than 16 million color display for all models and 1280 x 800 high resolution display for the 12 and 15-inch models
- Multimedia including video and PDF \*1
- 2 Ethernet ports capable of simultaneous access from both the control device and maintenance segments by separating the segments
- Sysmac Studio providing an Integrated Development Environment NJ/NX/NY variables sharing in the NA project and NA application testing with the NJ/NX/NY program via the Simulator to reduce development
- NJ/NX/NY variables sharing in the NA project and NA application testing with the NJ/NX/NY program via the Simulator to reduce development time
- Many security features including operation authority settings and execution restrictions with IDs
- Microsoft Visual Basic for versatile, flexible and advanced programming
- Software providing NA5-equivalent functionality on a PC or panel PC
- \*1. Version 1.5 or higher of pdf file is not supported.

### System configuration

### NA5

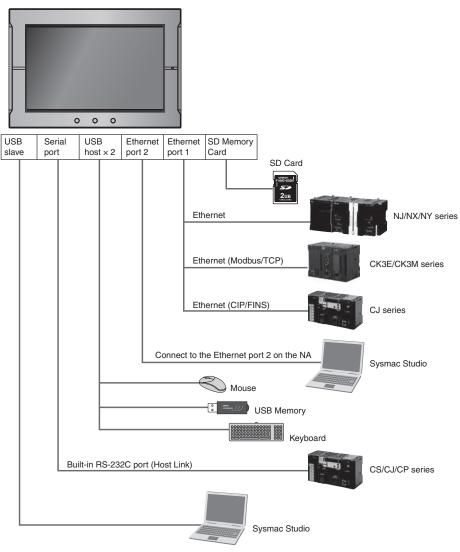

### **NA** series

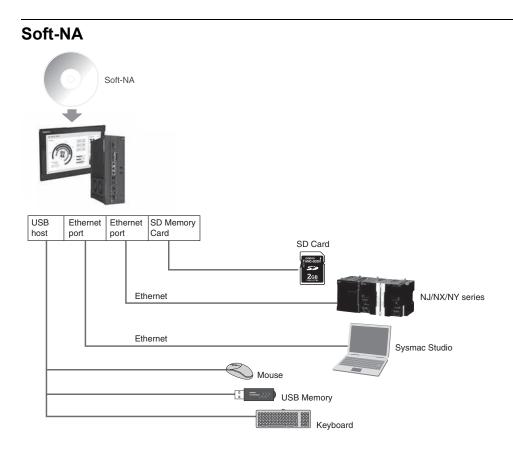

### **Ordering Information**

### NA5-🗆W

Product name	Specifications	Model
NA5-15W	15.4 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 1280 × 800 dots, Frame color : Silver	NA5-15W101S-V1
NA5-15W	15.4 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 1280 × 800 dots, Frame color : Black	NA5-15W101B-V1
NA5-12W	12.1 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 1280 × 800 dots, Frame color : Silver	NA5-12W101S-V1
NA5-12W	12.1 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 1280 × 800 dots, Frame color : Black	NA5-12W101B-V1
	9 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 800 × 480 dots, Frame color : Silver	NA5-9W001S-V1
NA5-9W	9 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 800 × 480 dots, Frame color : Black	NA5-9W001B-V1
	7 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 800 × 480 dots, Frame color : Silver	NA5-7W001S-V1
NA5-7W	7 inch wide screen, TFT LCD, 16,770,000 colors (24 bit full color), 800 × 480 dots, Frame color : Black	NA5-7W001B-V1
		NA-15WATW01
High-pressure	This metal frame is for high-pressure waterproofing. Install it to conform to UL Type 4X standards.	NA-12WATW01
Waterproof Attachment	UL Type 4X is the rating for high-pressure wash-down applications with a flow rate of 246 liter/min.	NA-9WATW01
		NA-7WATW01

### Options

Product name	Specifications		Model
	2 GB		HMC-SD292
SD memory card	memory card         4 GB           16 GB         10 CB		HMC-SD492
			HMC-SD1A2
	2 GB		FZ-MEM2G
JSB Memory	16 GB		FZ-MEM16G
Replacement Battery	Battery life: 5 years (at 25°C). This Battery is provided as an accessor	ту.	CJ1W-BAT01
	D-sub, 9-pin plug to D-sub, 9-pin plug	Length: 2m	XW2Z-200T
RS-232C		Length: 5m	XW2Z-500T
Connecting Cable	D sub 0 sis shus to discrete wire	Length: 2m	XW2Z-200T-3
	D-sub, 9-pin plug to discrete wire	Length: 5m	XW2Z-500T-3
	For the NA5-15W. Attach a Sheet to the screen to protect against different The entire Sheet is colorless and transparent. Five Sheets are provide		NA-15WKBA04
Anti-reflection Sheets	For the NA5-12W. Attach a Sheet to the screen to protect against diffu The entire Sheet is colorless and transparent. Five Sheets are provide		NA-12WKBA04
Anti-renection Sheets	For the NA5-9W. Attach a Sheet to the screen to protect against diffus The entire Sheet is colorless and transparent. Five Sheets are provide	NA-9WKBA04	
	For the NA5-7W. Attach a Sheet to the screen to protect against diffus The entire Sheet is colorless and transparent. Five Sheets are provide		NA-7WKBA04

### Soft-NA

Product name	Specifications	Number of licenses	Media	Model
	The Soft-NA is software that displays information on FA manufacturing sites	- (Media only)	DVD	NA-RTSM
Soft-NA	while providing safety, reliability, and maintainability as an industrial display on which operations can be performed as necessary. The Soft-NA runs on the following OS:	1 license		NA-RTLD01
JUIT-NA		3 licenses	USB dongle	NA-RTLD03
	Windows 10 Pro Version 1903 or later 64 bit	10 licenses		NA-RTLD10

System Requirements When using a commercially-available PC

Item		Requirement
OS		Windows 10 Pro Version 1903 or later 64 bit
Processor		Intel Atom <sup>®</sup> x5-E3940 equivalent or higher processor
RAM		4 GB or more
Free space in the hard drive necessary for installation		1 GB or more
Optical disk drive		DVD-ROM drive
Communication	USB	USB2.0 Type-A x 2
port	LAN	Ethernet x 2

#### When using the industrial PC platform NY-series

- NYB\_\_\_4\_\_4
- NYPDD-00300-0000000 \*1
- NYP\_\_\_\_4\_\_\_\_\*1
- NY500-100-00440000 \*1

**\*1.** Need to be supported only when used on the OS installed during factory dispatch.

### Automation Software Sysmac Studio

The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI.

For details, refer to your local OMRON website and Sysmac Studio Catalog (Cat. No. P138).

### **USB** Cable

Product name	Specifications
USB Cable	Use commercially available USB cable. Specifications: USB 2.0 cable (A connector - B connector), 5.0 m max.

### **Recommended Network Devices** Industrial Switching Hubs

Product name	Functions	No. of ports	Accessories	Current consumption (A)	Model
Industrial Switching Hubs	Quality of Service (QoS): EtherNet/IP control data priority 10/100BASE-TX, Auto-Negotiation	5	Power supply connector	0.07	W4S1-05D

### **Recommended Ethernet Communications Cables**

Use STP (shielded twisted-pair) cable of category 5 or higher

Product name		Recommended manufacturer	Model
	Cables	Hitachi Metals, Ltd	NETSTAR-C5E SAB 0.5 × 4P CP
Wire Gauge and Number of Pairs: AWG24, 4-pair Cable		Kuramo Electric Co.	KETH-SB
	RJ45 Connectors	Panduit Corporation	MPS588

Note: 1. We recommend you to use above cable and RJ45 Connectors together.

### **Performance Specifications**

### Display

Item		Specification				
		NA5-15W	NA5-12W	NA5-9W	NA5-7W	
	Display device	TFT LCD				
	Screen size	15.4 inches	12.1 inches	9.0 inches	7.0 inches	
	Resolution	1,280 × 800 dots (horizontal × vertical)		800 × 480 dots (horizontal × vertical)		
Display panel <b>*</b> 1	Colors	16,770,000 colors (24 bit full colors)				
	Effective display area	331 × 207 mm (horizontal × vertical)	261 × 163 mm (horizontal × vertical)	197 × 118 mm (horizontal × vertical)	152 × 91 mm (horizontal × vertical)	
	View angles	Left: 60°, Right: 60°, Top:	60°, Bottom: 60°			
	Life	50,000 hours min. *3				
Backlight <b>*</b> 2	Brightness adjustment	200 levels				
	Туре	LED				
Front panel indicators *4	RUN	Lit green: Normal operation Lit red: Error				

\*1. There may be some defective pixels in the display. This is not a fault as long as the numbers of defective light and dark pixels fall within the following standard ranges.

Model	Standard range
NA5-15W	Number of light and dark pixels: 10 or less. (There must not be 3 consecutive light/dark pixels.)

\*2. The backlight can be replaced at an OMRON maintenance base.
\*3. This is the estimated time before brightness is reduced by half at room temperature and humidity. The life expectancy is drastically shortened if Programmable Terminal is used at high

temperatures.\*4. The brightness of the front panel indicators is also adjustable when you adjust the brightness of the backlight.

### Operation

ltem	Specification				
nem	NA5-15W	NA5-12W	NA5-9W	NA5-7W	
	Method: Analog resistive membrane type				
Touch panel	Resolution: 16,384 × 16,384				
	Life: 1,000,000 operations				
Function keys <b>*1</b>	3 inputs (capacitance inputs)				

\*1. Each function key has blue indicator. The brightness of the function key indicators is also adjustable when you adjust the brightness of the backlight.

### **Data Capacity**

Itom	Specification			
Item	NA5-15W	NA5-12W	NA5-9W	NA5-7W
User data capacity	256 MB			

### **External Interfaces**

ltem		Specifications (Same for all models.)
	Applications	Port 1: Connecting to anything other than the Sysmac Studio, e.g., device connections and VNC clients Port 2: Connecting to the Sysmac Studio in addition to the applications of port 1.
	Number of ports	2 ports
Ethernet ports	Compliant standards	IEEE 802.3i (10BASE-T), IEEE 802.3u (100BASE-TX), and IEEE 802.3ab (1000Base-T)
	Transmission media	Shielded twisted-pair (STP) cable: Category 5, 5e, or higher
	Transmission distance	100 m
	Connector	RJ-45 8P8C modular connector
	Applications	USB Memory Device, keyboard, or mouse
	Number of ports	2 ports
USB host ports *1 *2	Compliant standards	USB 2.0
	Transmission distance	5 m max.
	Connector	Type-A connector
	Applications	Sysmac Studio connection
	Number of ports	1 port
USB slave port <b>*</b> 1	Compliant standards	USB 2.0
	Transmission distance	5 m max.
	Connector	Type-B connector
	Applications	Device Connection
	Number of ports	1 port
Serial port	Compliant standards	RS-232C
	Transmission distance	15 m max.
	Connector	D-DUB 9-pin female connector
	Applications	To transfer or store the project or to store log data.
SD Memory Card slot	Number of slots	1 slot
	Compliant standards	SD/SDHC

**\*1.** Connection to all USB 2.0-compliant devices is not guaranteed.


\*2. Use a USB memory for temporary applications such as transferring data.

### NA series General Specifications


Item	Specification							
item	NA5-15W	NA5-12W	NA5-9W	NA5-7W				
Rated supply voltage	24 VDC	1						
Allowable power supply voltage range	19.2 to 28.8 VDC (24 VDC ±20	19.2 to 28.8 VDC (24 VDC ±20%)						
Allowable momentary power nterruption time	Operation for momentary powe	peration for momentary power interruption is not specified.						
Power consumption	29 W max.	W max. 25 W max. 23 W max. 19 W max.						
Ambient operating temperature	0 to 50°C <b>*</b> 1 <b>*</b> 2							
Ambient storage temperature	–20 to +60°C <b>*</b> 3							
Ambient operating humidity	10 to 90% <b>*</b> 2 Must be no condensation.							
Atmosphere	Must be free from corrosive ga	ses.						
Pollution degree	2 or less: Meets IEC 61010-2-2	201.						
loise immunity	2 kV on power supply line (Cor	nforms to IEC 61000-4-4.)						
Vibration resistance (during operation)		Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5 mm half amplitude and 8.4 to 150 Hz with 9.8 m/s² for 100 minutes each in X,Y, and Z directions (Time coefficient of 10 minutes × coefficient factor of 10 = total time of 100 min.)						
Shock resistance (during operation)	Conforms to IEC 60028-2-27. 147 m/s <sup>2</sup> 3 times each in X, Y,	and Z directions						
Dimensions	420 × 291 × 69 mm (W × H × D)	340 × 244 × 69 mm (W × H × D)	290 × 190 × 69 mm (W × H × D)	236 × 165 × 69 mm (W × H × D				
Panel cutout dimensions	392 <sup>•1</sup> × 268 <sup>•1</sup> mm (horizontal × vertical) Panel thickness: 1.6 to 6.0 mm <b>*</b> 4	310 <sup>1</sup> × 221 <sup>1</sup> mm (horizontal × vertical) Panel thickness: 1.6 to 6.0 mm <b>*</b> 4	261 <sup>•1</sup> × 166 <sup>•1</sup> mm (horizontal × vertical) Panel thickness: 1.6 to 6.0 mm <b>*</b> 4	197 0 <sup>05</sup> × 141 0 <sup>05</sup> mm (horizontal × vertical) Panel thickness: 1.6 to 6.0 mm <b>*</b> 4				
Weight	3.2 kg max.	2.4 kg max.	1.8 kg max.	1.4 kg max.				
Degree of protection	IP65 oil-proof type, UL Type 4 To reinstall the NA Unit in a pa		sentative for replacement of the	rubber packing.				
Battery life	Battery life: 5 years at 25°C The RTC will be backed up for 5 days after the battery runs low. The RTC will be backed up by a super capacitor for 5 minutes after removing the old battery. (This assumes that the power is first turned ON for at least 5 minutes and then turned OFF.)							
nternational standards <b>*5 *6</b>	EU UKCA Shipbuilding standards LR, DN IP65 oil-proof, UL Type 4X *4 cULus KC RCM	(Front-panel controls)						

 The ambient operating temperature is subject to the following restrictions, depending on the mounting angle.


- The ambient operating temperature is 0° to 40°C when the mounting angle is 0° or more and less than 45° to the horizontal.
- The ambient operating temperature is  $0^{\circ}$  to  $50^{\circ}$ C when the mounting angle is  $45^{\circ}$  or more and  $90^{\circ}$  or less to the horizontal.
- The ambient operating temperature is 0° to 50°C when the mounting angle is 90° or more and 135° or less to the horizontal.

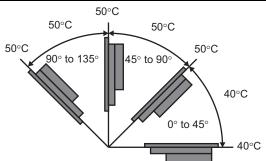

\*2. Use the Programmable Terminal within the following temperature and humidity ranges.

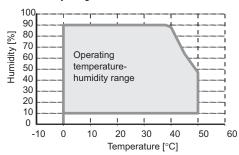

\*3. Store the Programmable Terminal within the following temperature and humidity ranges.

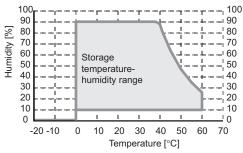

- \*4. Use the NA- WATW01 High-pressure Waterproof Attachment (sold separately) to conform to UL Type 4X.
- When the NA-□WATW01 High-pressure Waterproof Attachment is used, the panel thickness is between 1.6 to 4.5 mm. **\*5.** Check with your OMRON representative or refer to the following OMRON website for the latest information on the applicable standards for each model: www.ia.omron.com.
- \*6. Use power supply Class 2 to conform to UL Standards.


### **Version Information**

NA series and Programming Devices

NA	series	Corresponding unit versions/version			
Model	NA system version	NJ/NX/NY-series Controller NX701 NY512 NX502 NY532 NX102 NJ501 NX1P2 NJ301 NX-CSG320 NJ101	Sysmac studio		
	1.17 or later	NX502: 1.60 or later	1.54 or higher		
	1.10 or later	NX-CSG320: 1.00 or later	1.24 or higher		
	1.09 or later	NX102: 1.30 or later	1.23 or higher		
NA5V1	1.08 or later	NX1P2: 1.13 or later NY512: 1.12 or later NY532: 1.12 or later NX701: 1.10 or later NJ101: 1.10 or later NJ501: 1.01 or later NJ501 Database Connection: 1.05 or later NJ301: 1.01 or later	1.40 or higher		

### **Components and Functions**


Front Panel

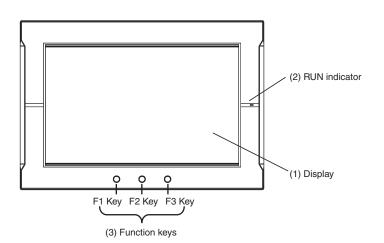

No.	Name	Description				
(1)	Display	he entire display is a touch panel that also functions as an input device.				
(2)	RUN indicator	The status of the indicator changes according to the status of the NA.				
(3)	Function keys	There are three function keys: F1, F2, and F3. F1 Key, : F2 Key, : F3 Key You can use the function keys as execution conditions for the actions for global or page events. You can also use the function keys for interlocks.				

### **NA** series

### **Back Panel**

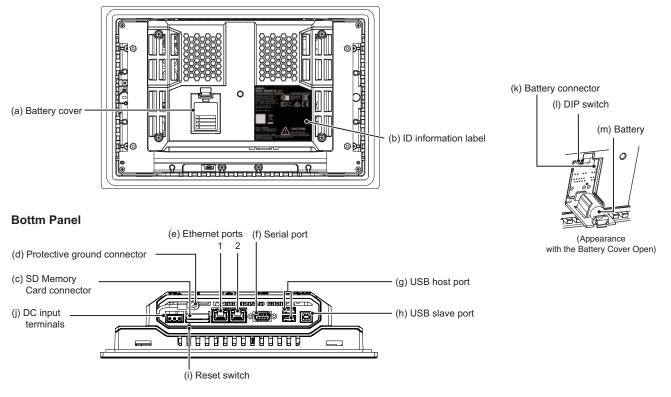

No.	Name	Description
(a)	Battery cover	Open this cover to replace the Battery.
(b)	ID information label	You can check the ID information of the NA Unit.
(c)	SD Memory Card connector	Insert an SD Memory Card here.
(d)	Protective ground terminal	Use for protective grounding.
(0)	Ethernet port 1	Connect a device other than the Sysmac Studio.
(e)	Ethernet port 2	Connect mainly the Sysmac Studio.
(f)	Serial port	Connect devices.
(g)	USB host port	Connect this port to a USB Memory Device, keyboard, mouse, etc.
(h)	USB slave port	Connect the Sysmac Studio or other devices.
(i)	Reset switch	Use this switch to reset the NA Unit.
(j)	DC input terminals	These are the power supply terminals. Connect the accessory power supply connector and supply power.
(k)	Battery connector	Connect the connector on the backup Battery here.
(I)	DIP switch	Used for system recovery. (The DIP switch is on a PCB that is accessed by opening the Battery cover.) In other cases, do not change any of the factory settings of the pins on the DIP switch.
(m)	Battery	This is the battery to backup the clock information in the NA Unit.

### Supported Devices

### NA5-000000-V1

Manufacturer	Models	Connection method	Communications driver	
	NX102-         NX1P2-         NX502-         NX701-         NJ301-         NJ101-         NY512-         NY532-         NX-CSG320	Built-in EtherNet/IP port	Ethernet	
	NX502-000	NX-EIP201		
	CJ2H-CPU64/65/66/67/68-EIP CJ2M-CPU31/32/33/34/35	Built-in EtherNet/IP port		
	CJ2H-CPU64/65/66/67/68-EIP CJ2M-CPU31/32/33/34/35	CJ1W-EIP21	— CIP Ethernet	
	CJ2H-CPU64/65/66/67/68-EIP CJ2M-CPU31/32/33/34/35	Built-in EtherNet/IP port		
	CJ1H-CPU65H/66H/67H CJ1H-CPU65H/66H/67H-R CJ1G-CPU42H/43H/44H/45H CJ1M-CPU11/12/13/21/22/23 CJ2H-CPU64/65/66/67/68(-EIP) CJ2M-CPU11/12/13/14/15 CJ2M-CPU31/32/33/34/35	CJ1W-ETN21 CJ1W-EIP21		
	CS1G-CPU42H/43H/44H/45H CS1H-CPU63H/64H/65H/66H/67H	CS1W-ETN21 CS1W-EIP21	— FINS Ethernet	
OMRON	CS1D-CPU65H/67H/67HA/68HA/44SA/67SA	CS1W-ETN21 CS1D-ETN21D CS1W-EIP21		
	CP1H-0000-0	CP1W-CIF41		
	CP1L-000-0 CP2E-N000-0	Built-in Ethernet port CP1W-CIF41		
	CK3E-1□10 CK3M-CPU1□1	Built-in Ethernet port	Modbus/TCP	
	CS1G-CPU42H/43H/44H/45H CS1H-CPU63H/64H/65H/66H/67H CS1D-CPU65H/67H/67HA/68HA/44SA/57SA	Built-in RS-232C port CS1W-SCB21-V1 CS1W-SCB41-V1 CS1W-SCU21-V1 CS1W-SCU21-V1 CS1W-SCU31-V1		
	CJ2H-CPU64/65/66/67/68(-EIP) CJ2M-CPU11/12/13/14/15/31/32/33/34/35	Built-in RS-232C port CJ1W-SCU22 CJ1W-SCU32 CJ1W-SCU32 CJ1W-SCU42		
	CP1L-0000-0 CP1H-0000-0	CP1W-CIF01 CP1W-CIF11 CP1W-CIF12-V1	Host Link	
	CP2ED	Built-in RS-232C port CP1W-CIF01 CP1W-CIF11 CP1W-CIF12-V1 CP2W-CIFD1 CP2W-CIFD2		

### NA-RTLD


Manufacturer	Models	Connection method	Communications driver
OMRON	NX102 NX1P2 NX502 NX701 NJ501 NJ301 NJ101 NY512 NY532 NX-CSG320	Built-in EtherNet/IP port	Ethernet
	NX502-	NX-EIP201	

### **NA** series


### Dimensions

(Unit: mm)

### NA5-15W101S-V1/-15W101B-V1

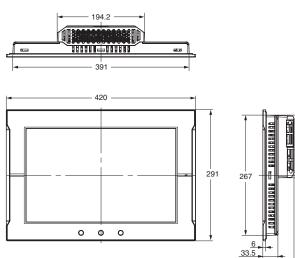


Cable Connection Dimensions

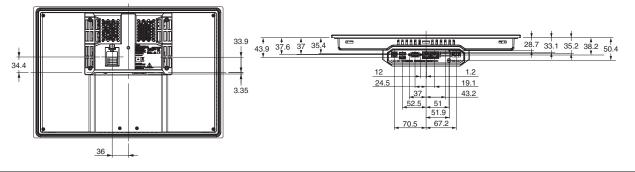


+ 69.1 +

139.1

### NA5-12W101S-V1/-12W101B-V1

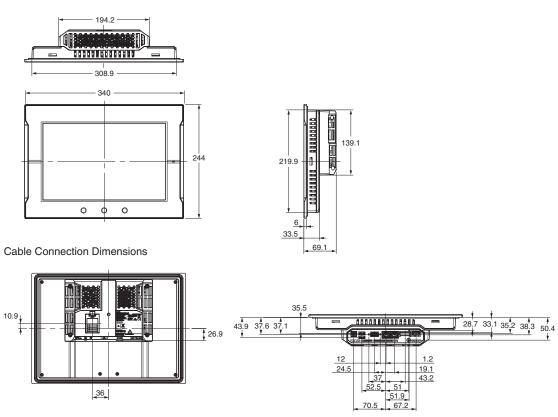


#### NA5-9W001S-V1/-9W001B-V1

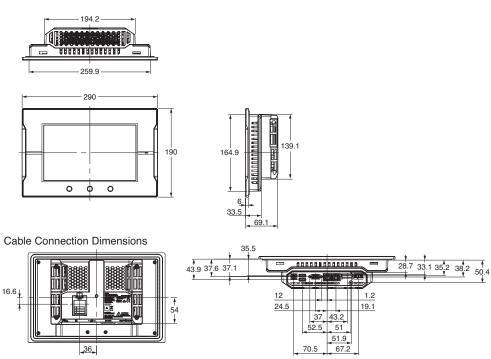

### NA5-7W001S-V1/-7W001B-V1

36

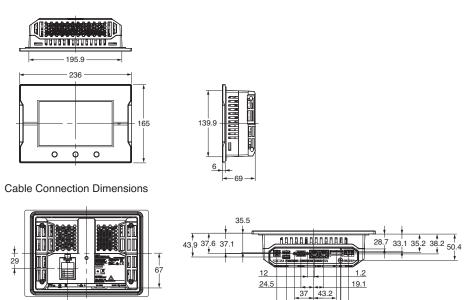

52.5 51 51.9 67.2

70.5

### **NA** series

### **Related Manuals**

Cat. No.	Model number	Manual	
V125	NA5-15□101□-V1 NA5-12□101□-V1 NA5-9□001□-V1 NA5-7□001□-V1	NA-series Programmable Terminal Hardware (-V1) User's Manual	
V118	NA5-15 101 (-V1) NA5-12 101 (-V1) NA5-9 001 (-V1) NA5-7 001 (-V1) NA-RTLD	NA-series Programmable Terminal Software User's Manual	
V119	NA5-15 101 (-V1) NA5-12 101 (-V1) NA5-9 001 (-V1) NA5-7 001 (-V1) NA-RTLD	NA-series Programmable Terminal Device Connection User's Manual	
V120	NA5-15W NA5-12W NA5-9W NA5-9W	NA-series Programmable Terminal Startup Guide	
V126	NA-RTLD	NA-series Programmable Terminal Soft-NA User's Manual	

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows, Visual Basic, Word, Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. EtherNet/IP™ is the trademarks of ODVA.

Intel, Atom are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

The SD logo is a trademark of SD-3C, LLC.

Some images are used under license from Shutterstock.com.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies. The product photographs and figures that are used in this catalog may vary somewhat from the actual products. Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

### **Terms and Conditions Agreement**

### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

### Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Note: Do not use this document to operate the Unit.

**OMRON Corporation** Industrial Automation Company

Kyoto, JAPAN

Contact : www.ia.omron.com

#### **Regional Headquarters**

OMRON EUROPE B.V. Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

OMRON ASIA PACIFIC PTE. LTD. 438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011 Fax: (65) 6835-3011 **OMRON ELECTRONICS LLC** 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 Fax: (86) 21-5037-2388 Authorized Distributor:

©OMRON Corporation 2020-2024 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM\_3\_5 Cat. No. V457-E1-12 0524 (0320)