# STEP3-PS/1AC/5DC/3/PT/USB-A

### Power supply unit



Data sheet 110974 en 00

© Phoenix Contact

2023-05-16

# 1 Description

The STEP POWER power supplies with Push-in connection technology are the professional solution for intelligent building automation. The compact devices are economical, space-saving, and flexible in application.

#### **Features**

- Device design for use in surface-mounted or flushmounted distributors (VDE 0603-1, DIN 43871)
- Energy savings with the highest level of efficiency in noload and part-load operation (Efficiency Level VI)
- Space savings in the control cabinet due to the narrow design combined with increased performance (up to 100%)
- Can be used throughout the world, thanks to the wide range input and comprehensive international approval package
- Approval for household purposes (DIN EN 60335-1) allows use in domestic applications
- Quick and easy startup with tool-free Push-in connection technology at a 45° angle with double terminal points
- Flexible assembly can be snapped onto the DIN rail or screwed onto a level surface

Technical data (short form)					
Input voltage range	100 V AC 240 V AC -15 % +10 % 110 V DC 250 V DC -20 % +10 %				
Mains buffering time	typ. 18 ms (120 V AC) typ. 80 ms (230 V AC)				
Nominal output voltage $(U_N)$	5 V DC				
Nominal output current (I <sub>N</sub> )	3 A				
Output power (P <sub>N</sub> )	15 W				
Efficiency (for nominal values)	> 81.5 % (120 V AC) > 82 % (230 V AC)				
Residual ripple	typ. 80 mV <sub>PP</sub>				
MTBF (IEC 61709, SN 29500)	230 V AC / > 2428000 h (25 °C) 230 V AC / > 1137000 h (40 °C) 230 V AC / > 647000 h (50 °C)				
With protective coating	No				
Ambient temperature (operation)	-10 °C 70 °C (Derating: > 50 °C; 2 %/K)				
Startup type tested	-25 °C				
Dimensions (W x H x D)	18 x 90 x 61 mm				
Horizontal pitch ( DIN 43880 )	1 Div.				
Weight	70 g				



All technical specifications are nominal and refer to a room temperature of 25  $^{\circ}$ C and 70  $^{\circ}$ C relative humidity at 100 m above sea level.



<b>2</b> 1	Table of contents  Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	4
5	Safety and installation notes	11
6	High-voltage test (HIPOT)	
U	6.1 High-voltage dielectric test (dielectric strength test)	
	6.2 High-voltage dielectric test during the manufacturing process	
	6.3 High-voltage dielectric test performed by the customer	
7	Design	13
	7.1 Rating plate	
	7.2 Device connections and functional elements	13
	7.3 Block diagram	
	7.4 Device dimensions	15
8	Mounting/remove	15
	8.1 Convection	
	8.2 Mounting position	
	8.3 Installation height	
	8.4 Keep-out areas	
	8.5 Mounting the power supply unit	
9	Device connection terminal blocks	
9	9.1 AC input terminal blocks	
	9.2 Primary side connection and fuse protection	
	9.3 DC output terminal blocks	
10	Function elements	
10	10.1 Indication element - DC OK LED	
11	Output characteristic curves	
12	Derating	21
	12.1 Ambient temperature	
	12.2 Installation height	
	12.3 Position-dependent derating	22
13	Application example	25
	13.1 Power supply in a surface-mounted or flush-mounted distributor	
14	Disposal and recycling	25

# 3 Ordering data

Description	Туре	Item no.	Pcs./Pkt.
Primary-switched power supply unit, STEP POWER, Push-in connection, DIN rail or direct mounting, input: 1- phase, output: 5 V DC / 3 A	STEP3-PS/1AC/5DC/3/PT/ USB-A	1335699	1
Accessories	Туре	Item no.	Pcs./Pkt.
DIN rail housing for use in distribution boards in accordance with DIN 43880, Housing set, width: 107.6 mm, height: 89.7 mm, depth: 62.2 mm, color: light grey (7035), cross connection: DIN rail bus connector, number of positions cross connector: 16	RPI-BC 107,6 DEV-KIT KMGY	2202874	1
DIN rail housing for use in distribution boards in accordance with DIN 43880, Housing set, width: 107.6 mm, height: 89.7 mm, depth: 62.2 mm, color: light grey (7035), cross connection: DIN rail bus connector, number of positions cross connector: 16	RPI-BC 107,6 EXT DEV-KIT KMGY	1107460	1
or positions cross connector. To			

 $\begin{bmatrix} \mathbf{i} \end{bmatrix}$ 

The range of accessories is being continuously extended. The current range of accessories can be found in the download area for the product.

110974\_en\_00 Phoenix Contact 3/25

# 4 Technical data

# Input data



Unless otherwise stated, all data applies for  $25^{\circ}$ C ambient temperature, 230 V AC input voltage, and nominal output current (I<sub>N</sub>).

Input voltage range (for DC, connect a suitable fuse)	100 V AC 240 V AC -15 % +10 % 110 V DC 250 V DC -20 % +10 %
Frequency range (f <sub>N</sub> )	50 Hz 60 Hz ±10 %
Typical national grid voltage	120 V AC / 230 V AC
Network type	Star network (TN, TT, IT (PE))
Current consumption 100 V AC / 240 V AC 110 V DC / 250 V DC	0.3 A / 0.14 A 0.17 A / 0.07 A
Current consumption 100 V AC / 240 V AC 110 V DC / 250 V DC	0.3 A / 0.14 A 0.17 A / 0.07 A
Discharge current to PE	< 0.25 mA
Mains buffering time 120 V AC / 230 V AC	typ. 18 ms / typ. 80 ms
Switch-on time	typ. 2 s
Inrush current (25 °C)	typ. 30 A
Inrush current integral (I <sup>2</sup> t)	typ. 0.14 A <sup>2</sup> s
Davisa maina fuan internal (davisa protection) alaw blaw	1 OF A

Device mains fuse, internal (device protection), slow-blow 1.25 A



During the first few microseconds, the current flow into the filter capacitors is excluded.




The SCCR (short-circuit current rating) value of the power supply unit corresponds to the SCCR value of the backup fuse.

Input protection, AC/DC (to be connected externally upstream)							
Input current I <sub>In</sub> Input protection	Circuit breaker			eaker		Neozed fuse or equivalent	Power switch
Characteristics	A	В	С	D	K	gG	≤ 13 x I <sub>In</sub> (maximum magnetic tripping)
6 A	-	✓	✓	✓	✓	-	-
8 A	-	✓	✓	✓	✓	-	-
10 A	-	✓	✓	✓	✓	-	-
13 A	-	✓	✓	✓	✓	-	-
16 A	-	✓	✓	✓	✓	-	-
20 A	-	✓	✓	✓	✓	-	-

110974\_en\_00 Phoenix Contact 4/25

## Electric strength of the insulation




Test voltage

Type test (IEC/EN 61010-1) 4 kV AC

Production test 3.75 kV AC


# **POWER factor**

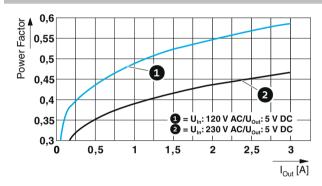

 Crest factor
 120 V AC
 230 V AC

 typ. 3.3
 typ. 4.2

## Input current vs. output current

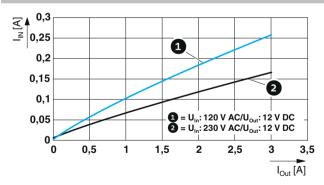

110974\_en\_00 Phoenix Contact 5/25

Connection data: Input	Connection cap Terminal blo		re	commended
Position		1.	.x	
Position identifier	1	.1, 1.2 (L),	1.3, 1.4 (N	J)
Connection method		Push-in c	onnection	
Stripping length		exible/ferru (Ferrule w		plastic sleeve) sleeve)
1-conductor rigid	0.2 mm <sup>2</sup> 2.5	mm²		1 mm²
1-conductor flexible	0.2 mm <sup>2</sup> 2.5	mm²		1 mm <sup>2</sup>
1-conductor flexible with ferrule without plastic sleeve	0.5 mm <sup>2</sup> 1.5	mm²		1 mm²
1-conductor flexible with ferrule with plastic sleeve	0.2 mm <sup>2</sup> 1 n	nm²		1 mm²
1-conductor rigid (AWG) (Cu)	24 14			17
Output data				
Nominal output voltage (U <sub>N</sub> )	5 V DC			
Nominal output current (I <sub>N</sub> )	3 A			
Output power (P <sub>N</sub> )	15 W			
Control deviation Static load change 10 % 90 % Dynamic load change 10 % 90 %, (10 Hz) change in input voltage ±10 %	< 1.5 % < 5 % < 0.1 %			
Short-circuit-proof	yes			
No-load proof	yes			
Residual ripple	typ. 80 mV <sub>PP</sub>			
Connection in parallel	yes, for increasing p	ower and r	edundancy	with diode
Connection in series	yes, for increased or	ıtput voltag	je	
Feedback voltage resistance	≤ 10 V DC			
Protection against overvoltage at the output (OVP)	< 10 V DC			
Rise time U <sub>Out</sub> = 10 % 90 %	typ. 100 ms			
Connection data: Output				
Position	2.x			
Position identifier	2.1 (USB-A)			
LED signaling				
$U_{Out} > 0.9 \times U_{N} (U_{N} = 5 \text{ V DC})$	LED lights up green			
$U_{Out} < 0.9 \times U_{N} (U_{N} = 5 \text{ V DC})$	LED off			
Reliability	25 °C	40 °C		50 °C
MTBF (IEC 61709, SN 29500)				
230 V AC	> 2428000 h	> 113700	00 h	> 647000 h

110974\_en\_00 Phoenix Contact 6/25

General data		
Degree of protection	IP20	
Protection class	II (in closed control cabinet)	
With protective coating	No	
Flammability rating UL 94 Housing, terminal blocks, base latches	V0	
Housing material	Polycarbonate	
Foot latch material	Polyamid	
Dimensions (W x H x D)	18 x 90 x 61 mm	
Device depth (DIN rail mounting)	55 mm	
Horizontal pitch	1 Div. (DIN 43880)	
Weight	70 g	
Power dissipation	120 V AC	230 V AC
No load	< 0.1 W	< 0.1 W
Nominal load	< 3.5 W	< 3.4 W
Efficiency	120 V AC	230 V AC
90 85 80 75 70 65 65 9 = U <sub>In</sub> : 120 V AC/U <sub>out</sub> : 5 V DC 9 = U <sub>In</sub> : 230 V AC/U <sub>out</sub> : 5 V DC	> 81.5 %	> 82 %

0,5

1

1,5

2

2,5

110974\_en\_00 Phoenix Contact 7/25

### **Ambient conditions**

Ambient temperature (operation) -10 °C ... 70 °C (Derating: > 50 °C; 2 %/K)

i

The ambient temperature (operation) refers to IEC 61010 surrounding air temperature.

Ambient temperature (start-up type tested) -25 °C

Ambient temperature (storage/transport) -40 °C ... 85 °C

Max. permissible relative humidity (operation) ≤ 95 % (at 25 °C, non-condensing)

Installation height ≤ 4000 m (> 2000 m, Derating: 10 %/1000 m)

Vibration (operation)

IEC 60068-2-6 < 15 Hz, amplitude ±2.5 mm 15 Hz ... 150 Hz, 2.3g, 90 min.

Shock (operation)

IEC 60068-2-27 18 ms, 30g, per spatial direction

Degree of pollution 2

Climate class

EN 60721 3K22

Overvoltage category

EN 61010-1 II ( $\leq$  4000 m) EN 62477-1 III ( $\leq$  2000 m)

### Standards/specifications

Electrical safety IEC 61010-1 (SELV)

Protective extra-low voltage IEC 61010-1 (SELV) IEC 61010-2-201 (PELV)

Safe isolation IEC 61558-2-16
Low-voltage power supplies. DC output EN 61204-3

Low-voltage power supplies, DC output EN 61204-3
Safety requirements for electrical equipment for IEC 61010-1

measurement, control, and laboratory use

Safety of electrical devices for household use and similar

purposes

DIN EN 60335-1

### Conformance/Approvals

UL 1310 Class 2 Power Units

UL/C-UL Listed UL 61010-1 UL/C-UL Listed UL 61010-2-201

UL/C-UL Listed ANSI/UL 121201 Class I, Division 2, Groups A,

B, C, D (Hazardous Location)

### Temperature class (ANSI/UL 121201)

Temp code T4 (-10...+70 °C; >50 °C, Derating: 2 %/K)



Current approvals/permissions for the product can be found in the download area under phoenixcontact.net/products

110974\_en\_00 Phoenix Contact 8/25

indus- ts in d) s B) s B) s A)
ts in d) s B) s B) s A) tts in d)
d) s B) s B) s A) tts in d)
s B) s A) tts in d)
ts in d)
ts in d)
<b>d)</b> 3)
<b>d)</b> 3)
<b>d)</b> 3)
3)
<u> </u>
3)
3)
3)
V
1) 1)
3)
3)
3 (\ 4

110974\_en\_00 Phoenix Contact 9/25

Immunity in accordance with EN 61000-6-2 (industrial)					
CE basic standard		Minimum normative requirements	Higher requirements in practice (covered)		
Conducted interference EN 61000-4-6	3				
	Input/output	asymmetrical	asymmetrical		
	Frequency range	0.15 MHz 80 MHz	0.15 MHz 80 MHz		
	Voltage	10 V (Test Level 3)	10 V (Test Level 3)		
	Comments	Criterion A	Criterion A		
Voltage dips EN 61000-4-11					
Input voltage (230 V AC, 50 Hz)					
	Voltage dip	70 %, 25 periods (Class 3)	70 % , 25 periods ( Class 3 )		
	Comments	Criterion C	Criterion A		
	Voltage dip	40 %, 10 periods (Class 3)	40 %, 10 periods (Class 3)		
	Comments	Criterion C	Criterion A		
	Voltage dip	0 %, 1 period (Class 3)	0 %, 1 period (Class 3)		
	Comments	Criterion B	Criterion A		
Key					
Criterion A	Normal operating b	ehavior within the specified limi	ts.		
Criterion B	Temporary impairment to operational behavior that is corrected by the device itself.				
Criterion C		e effects on the operating behavich can be restored by actuating			

110974\_en\_00 Phoenix Contact 10/25

# 5 Safety and installation notes

### Symbols used

Instructions and possible hazards are indicated by corresponding symbols in this document.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety measures that follow this symbol to avoid possible personal injuries.

There are different categories of personal injury that are indicated by a signal word.



#### WARNING

This indicates a hazardous situation which, if not avoided, could result in death or serious injury.



#### CAUTION

This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

The following symbols are used to indicate potential damage, malfunctions, or more detailed sources of information.



### **NOTE**

This symbol together with the signal word NOTE and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.



This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

### Safety notes and warning instructions



### WARNING: Danger to life by electric shock!

- Only skilled persons may install, start up, and operate the device.
- Never carry out work when voltage is present.
- Establish connection correctly and ensure protection against electric shock.
- Cover termination area after installation in order to avoid accidental contact with live parts (e. g., installation in control cabinet).



### **NOTE**

- Observe the national safety and accident prevention regulations.
- Assembly and electrical installation must correspond to the state of the art.
- The power supply is a built-in device and is designed for mounting in a control cabinet.
- The IP20 degree of protection of the device is intended for use in a clean and dry environment.
- Observe mechanical and thermal limits.
- Horizontal mounting position (normal mounting position)
- Mount the power supply unit in the standard installation position. Position of the L/N connection terminal blocks at bottom.
- Ensure that the primary-side wiring and secondary-side wiring are the correct size and have sufficient fuse protection.
- For the connection parameters for wiring the power supply, such as the required stripping length with and without ferrule, refer to the technical data section.
- Use copper cables for operating temperatures of >75 °C (ambient temperature <55 °C)</li>
   >90 °C (ambient temperature <75 °C).</li>
- The power supply is approved for the connection to TN, TT and IT power grids (star networks) with a maximum phase-to-phase voltage of 240 V AC
- Protect the device against foreign bodies penetrating it,
   e.g., paper clips or metal parts.
- The power supply is maintenance-free. Repairs may only be carried out by the manufacturer. The warranty no longer applies if the housing is opened.
- Protection may be impaired if the equipment is used in a manner not specified by the manufacturer.

110974\_en\_00 Phoenix Contact 11/25

# 6 High-voltage test (HIPOT)

This protection class II power supply is subject to the Low Voltage Directive and is factory tested. During the HIPOT test (high-voltage test), the insulation between the input circuit and output circuit is tested for the prescribed electric strength values, for example. The test voltage in the high-voltage range is applied at the input and output terminal blocks of the power supply. The operating voltage used in normal operation is a lot lower than the test voltage used.



High-voltage tests can be performed as described.

The test voltage should rise and fall in ramp form. The relevant rise and fall time of the ramp should be at least two seconds.

# 6.1 High-voltage dielectric test (dielectric strength test)

In order to protect the user, power supplies (as electric components with a direct connection to potentially hazardous voltages) are subject to more stringent safety requirements. For this reason, permanent safe electrical isolation between the hazardous input voltage and the touch-proof output voltage as safety extra-low voltage (SELV) must always be ensured.

In order to ensure permanent safe isolation of the AC input circuit and DC output circuit, high-voltage testing is performed as part of the safety approval process (type test) and manufacturing (routine test).

# 6.2 High-voltage dielectric test during the manufacturing process

During the power supply manufacturing process, a high-voltage test is performed as part of the dielectric test in accordance with the specifications of IEC/UL/EN 61010-1. Routine manufacturing tests are inspected regularly by a certification authority.

### 6.3 High-voltage dielectric test performed by the customer

Apart from routine and type tests to guarantee electrical safety, the end user does not have to perform another high-voltage test on the power supply as an individual component. According to EN 60204-1 (Safety of machinery - Electrical equipment of machines) the power supply can be disconnected during the high-voltage test and only installed once the high-voltage test has been completed.

### 6.3.1 Performing high-voltage testing

If high-voltage testing of the control cabinet or the power supply as a stand-alone component is planned during final inspection and testing, the following features must be observed.


- The power supply wiring must be implemented as shown in the wiring diagram.
- The maximum permissible test voltages must not be exceeded.

Avoid unnecessary loading or damage to the power supply due to excessive test voltages.



For the relevant applicable test voltages and insulation distances, refer to the corresponding table (see technical data: electric strength of the insulation section).

Figure 1 Potential-related wiring for the high-voltage test

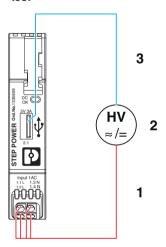

Key

No.	Designation	Color coding	Potential lev- els
1	AC input circuit	Red	Potential 1
2	High-voltage tester		
3	DC output circuit	Blue	Potential 2

110974\_en\_00 Phoenix Contact 12/25

# 7 Design

### 7.1 Rating plate


In accordance with the German Product Safety Law (ProdSG) it is only permissible to make such products available on the market if they meet certain safety standards. It must be ensured at all times that users are not exposed to hazards.

In accordance with ProdSG, every device must therefore be fitted with a rating plate. All relevant information on the safe use of the device must also be included.



The power supply device rating plate is located on the right-hand side of the housing (as viewed from the front).

Figure 2 Rating plate information

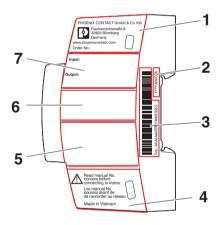

### Key

No.	Designation
1	Identification of the provider
2	Date of manufacture
3	Bar code and serial number for device identification
4	Designation of product-related device documentation
5	Device approvals
6	Ambient conditions
7	Device connection data


### 7.2 Device connections and functional elements

Device connections are labeled with connection tags to ensure clear and definitive identification.

The connection tags are split into the following connection levels:

Connection level	Description
1.x	Input
2.x	Output

Figure 3 Location of functional elements and device connections

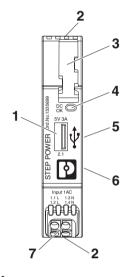


### Key

No.	Designation	Connection labeling
1		2.1
2	Mounting flange for wall mounting (back of device)	
3		
4	Signaling DC OK LED	
5	Integrated snap-on foot for DIN rail mounting (back of device)	
6	QR code web link	
7	Connection terminal block input voltage: Input L/N	1.1 1.4

110974\_en\_00 Phoenix Contact 13/25

# 7.3 Block diagram

Figure 4 Block diagram

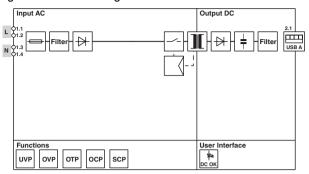

# Key

Symbol	Designation – Input AC, Output DC		
	Input fuse, internal device protection		
Filter	EMC filter		
	Rectification		
	Switching transistor		
	Transmitter with electrical isolation		
+	Smoothing capacitor		
	Control equipment		

Symbol	Designation – Functions	
UVP	Undervoltage protection protects the AC input of the power supply against damage in the event of an AC undervoltage.	
OVP	Overvoltage protection protects the DC output of the power supply and the connected load against damage in the event of an overvoltage	
ОТР	Overtemperature protection protects the power supply against damage in the event of impermissibly high intrinsic external heating.	
ОСР	Overcurrent protection protects the DC output of the power supply against damage in the event of an impermissibly high current load.	
SCP	Short-circuit protection protects the DC output of the power supply against damage in the vent of an output-side short circuit.	

Symbol	Designation – User interface	
\V \ <b>3</b>	DC OK LED, indicates the operating status of the power supply	

110974\_en\_00 Phoenix Contact 14/25

#### 7.4 Device dimensions

Figure 5 Device dimensions (dimensions in mm)


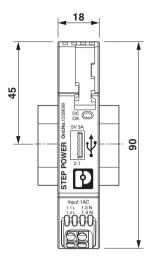


Figure 6 Device dimensions (dimensions in mm)

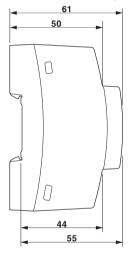


# 8 Mounting/remove

The fanless convection-cooled power supply can be snapped onto 35 mm DIN rails with a top hat profile (TH 35-7.5 / TH 35-15) in accordance with EN 60715.

### 8.1 Convection

To ensure sufficient convection, a minimum clearance is necessary between the power supply and above/below the installed devices. The minimum clearances are rated based on the standard mounting position with nominal power supply operation (see section: Restricted areas).

Figure 7 Schematic diagram of the convection cooling

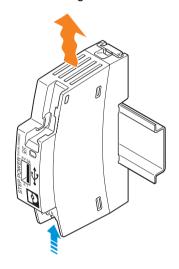


110974\_en\_00 Phoenix Contact 15/25

### 8.2 Mounting position


The specified technical data for the power supply is based on nominal operation in the standard mounting position. Any different technical data based on deviating mounting positions or other ambient conditions is labeled accordingly (see section: Derating).

Figure 8 Power supply installed in the normal mounting position

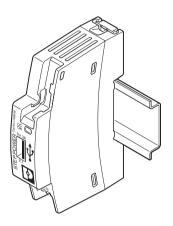

### 8.4 Keep-out areas

Figure 9 Device dimensions and minimum keep-out areas (in mm)

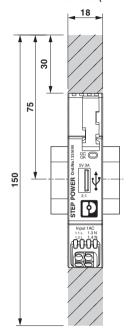

# 8.3 Installation height

You can operate the power supply without power limitations up to an installation altitude of 2000 m. For altitudes higher than 2000 m, different specifications apply due to the differing air pressure and the reduced convection cooling associated with this (see section: Derating).

110974\_en\_00 Phoenix Contact 16/25


### 8.5 Mounting the power supply unit

### 8.5.1 Mounting on a DIN rail (integrated snap-on foot)

To mount the power supply on a DIN rail, proceed as follows:

- In the standard mounting position, the power supply is mounted on the DIN rail from the front. When doing so, ensure that the snap-on foot rests completely on the DIN rail (A).
- 2. Then push the power supply onto the DIN rail until the snap-on foot audibly snaps into place (B).
- Check that the power supply is securely attached to the DIN rail.

Figure 10 Snapping the power supply onto the DIN rail

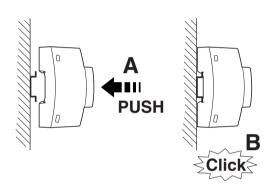



The power supply housing has been designed so that it can also be mounted and operated in a surface-mounted or flush-mounted distributor in accordance with VDE 0603-1 or DIN 43871. The power supply is mounted via the integrated snapon foot directly onto the DIN rail of the surface-mounted or flush-mounted distributor (see section: Application example).

# 8.5.2 Screw fixing to the mounting surface (mounting flanges)

To mount the power supply with screws directly on the mounting surface, proceed as follows:

- 1. Two M4 cylinder screws (DIN EN ISO 1207) are needed to screw-mount the power supply.
- 2. Drill two fixing holes with M4 threads and a hole clearance of 98 mm in the mounting location.
- Push the mounting flanges (orange base latch) for fixing to the mounting surface upwards and downwards out of the housing base.
- 4. Screw the power supply onto the mounting surface using the two M4 cylinder screws.
- Check that the power supply is securely attached to the mounting surface.

Figure 11 Screw fixing of the power supply to the mounting surface


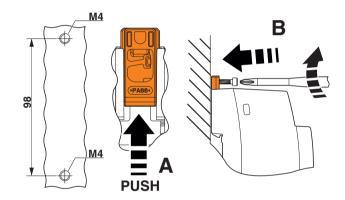


Figure 12 Strain relief with cable tie

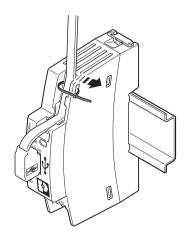

110974\_en\_00 Phoenix Contact 17/25


### 8.6 Removing the power supply unit

### 8.6.1 DIN rail end mounting (integrated snap-on foot)

To remove the power supply from the DIN rail, proceed as follows:

- Take a suitable screwdriver and insert it into the interlock opening on the snap-on foot.
- 2. Release the latch by levering the screwdriver downwards (A).
- 3. Carefully swivel the power supply downwards (B) and let the interlock slide back into the starting position.
- 4. Then lift the power supply from the DIN rail.

Figure 13 Removing the power supply from the DIN rail

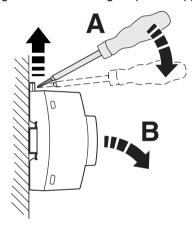

# 8.6.2 Removal from the mounting surface (mounting flanges)




WARNING: Danger due to short circuit When unscrewing and removing the M4 cylinder screws, ensure that none fall into your application.

To remove the power supply from the mounting surface, proceed as follows:

- 1. Unscrew one of the two M4 cylinder screws used to attach the power supply.
- 2. Remove the M4 cylinder screw.
- 3. Unscrew the second M4 cylinder screw and then remove the power supply.

Figure 14 Loosening the screw fixing of the power supply

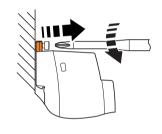

110974\_en\_00 Phoenix Contact 18/25

### 9 Device connection terminal blocks

The front-mounted AC input terminal blocks and DC output terminal blocks of the power supply feature Push-in connection technology. No tools are necessary for wiring the primary and secondary side connection terminal blocks.



For the necessary connection parameters for the connection terminal blocks, refer to the technical data section.

#### 9.1 AC input terminal blocks

The power supply is designed such that it can be operated on single-phase AC supply systems or on two phase conductors of three-phase systems. Here, the star supply system supports various supply system configurations, for example TT, TN, and IT systems.


The power supply is connected on the primary side via the Input AC connection terminal blocks (connection level 1.x, input).

The AC input terminal points and DC output terminal points of the Push-in connection terminal blocks are aligned at a 45° angle. This increases the number of non-isolated terminal points. No tools are necessary for wiring the primary and secondary side connection terminal blocks.



The power supply is approved for connection to TN, TT, and IT power grids with a maximum phase-to-phase voltage of 240 V AC.

Figure 15 Position of the AC input terminal blocks

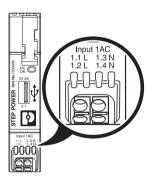


### 9.2 Primary side connection and fuse protection

The installation of the power supply must conform to the regulations of EN 61010. It must be possible to switch the power supply off using a suitable disconnection device outside of the power supply. The line protection on the primary side is suitable for this (see section: Technical data).

### 9.2.1 1AC supply network

Figure 16 Schematic diagram, single-phase fuse protection



### 9.2.2 3AC supply network




### **DANGER: Hazardous voltage**

When operating the power supply on a threephase system, observe the maximum permissible phase-to-phase voltage (see section: Technical data).

The primary-side fuse protection in two-phase operation must be cover all poles.

Figure 17 Schematic diagram, two-phase fuse protection



110974\_en\_00 Phoenix Contact 19/25

### 9.2.3 DC supply network



### **DANGER: Hazardous voltage**

When operating the power supply on a DC voltage system, observe the maximum permissible input voltage (see section: Technical data).


The primary-side fuse protection in DC operation must cover all poles.




# NOTE: Damage possible if an incorrect fuse is used

In DC operation, only use fuses that are approved for DC voltages.

Figure 18 Schematic diagram, two-phase fuse protection



### 9.3 DC output terminal blocks

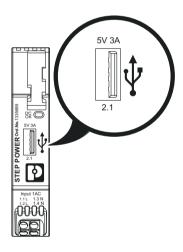

### 9.3.1 Wiring principle for DC output terminals

### 9.3.2 Protection of the secondary side

The power supply is electronically short-circuit-proof and no-load-proof. In the event of an error, the output voltage is limited



If sufficiently long connecting cables are used, fuse protection does not have to be provided for each individual load.

### 10 Function elements

The functional elements of the power supply are located on the front of the housing of the power supply and are categorized as follows:

Indication element

### 10.1 Indication element - DC OK LED

A DC OK LED is available for preventive function monitoring of the power supply. Through various different signals, the DC OK LED provides information on the operating status of the power supply.

The possible DC OK statuses are to be found in the following table:

DC OK LED	Description
0	Primary-side AC supply is not available or too low.
	Power supply in overload operation $U_{OUT} < 0.9 \times U_{N} (U_{N} = 5 \text{ V DC})$
•	Power supply in normal operation U <sub>OUT</sub> >0.9 x U <sub>N</sub> (U <sub>N</sub> = 5 V DC)

 $\bigcirc$  = off,  $\bullet$  = on (green)

Figure 19 DC OK LED



110974\_en\_00 Phoenix Contact 20/25


## 11 Output characteristic curves

In normal operation, the power supply supplies the output power in accordance with the device nominal data. If the DC output current supplying the loads increases to an impermissibly high level due to a fault, the power supply disconnects the DC output. The power supply remains in operation, despite the functional disturbance.

The green DC OK LED is deactivated (see section: Function elements, display element – DC OK LED).

In HICCUP mode, the power supply attempts to return to the conditions present prior to the detected current increase cyclically. This procedure is repeated until the cause of the current increase due to overload or short circuit has been remedied. The power supply then automatically switches back to normal operation. The DC OK LED is reactivated.

Figure 20 Schematic diagram, HICCUP mode in the event of overload

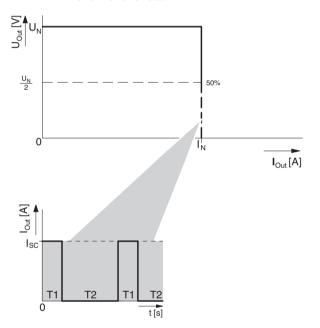

Marking	Value	Description
I <sub>SC</sub>	ca. 5,5 A	Maximum output current (short-circuit current) in HICCUP mode
T1	10 ms	Pulse time (ON) in HIC- CUP mode
T2	350 ms	Pause time (OFF) in HIC- CUP mode

### 12 Derating

### 12.1 Ambient temperature


When mounted in the standard mounting position and operated within the permissible temperature range for nominal operation, the power supply provides full output power. If the power supply is operated beyond the temperature range for nominal values, note the reduced output power for the supply of DC loads.



### NOTE: Damage due to thermal overload

If the power supply is operated in a different temperature range, only a reduced amount of power can be drawn. Otherwise, the power supply will be thermally loaded disproportionately and the device service life significantly reduced. This thermal load may even damage the power supply such that it is no longer operational.


Figure 21 Output power depending on the ambient temperature

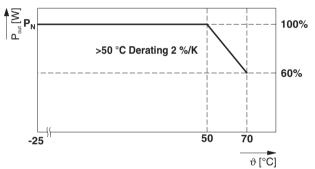

### 12.2 Installation height

The power supply can be operated at an installation height of up to 2000 m without any limitations. Different data applies for installation locations above 2000 m due to the differing air pressure and the reduced convection cooling associated with this.

Figure 22 Output power depending on the installation height

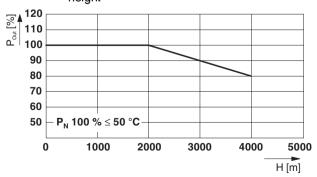

110974\_en\_00 Phoenix Contact 21/25

### 12.3 Position-dependent derating


In order that you can use the nominal power of the power supply without limitation, the power supply should always be mounted in the standard mounting position. Sufficient device-side convection is always assured if the power supply is mounted in the standard mounting position and the necessary restricted areas are observed.




### NOTE: Damage due to thermal overload


If the supply is mounted in a different mounting position, only a reduced amount of power can be drawn. Otherwise, the power supply will be thermally loaded disproportionately and the device service life significantly reduced.


### 12.3.1 Normal mounting position

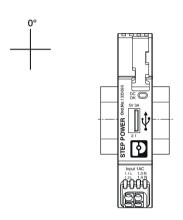

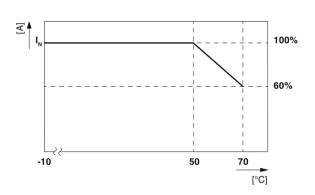


### 12.3.2 Rotated mounting position 90° Z-axis

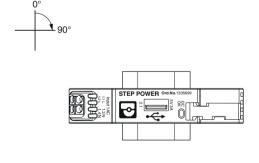

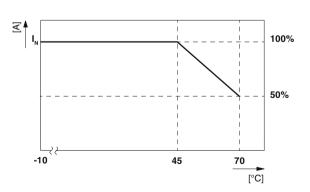


110974\_en\_00 Phoenix Contact 22/25

# 12.3.3 Rotated mounting position 180° Z-axis

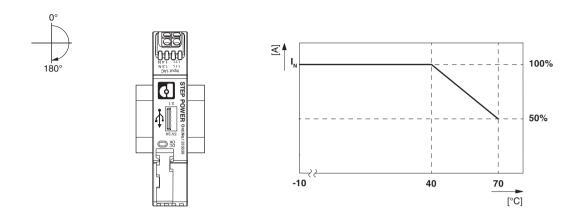


# 12.3.4 Rotated mounting position 270° Z-axis

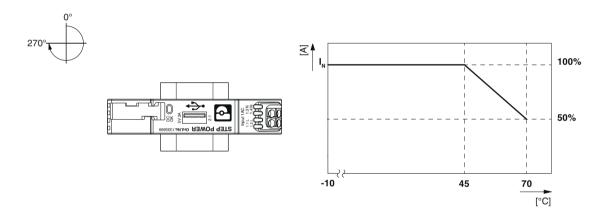


110974\_en\_00 Phoenix Contact 23/25

# 12.3.5 Rotated mounting position 90° X-axis

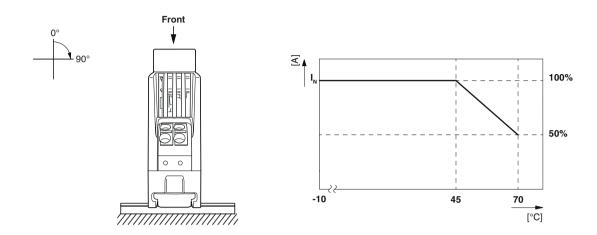

# 12.3.6 Rotated mounting position 270° X-axis

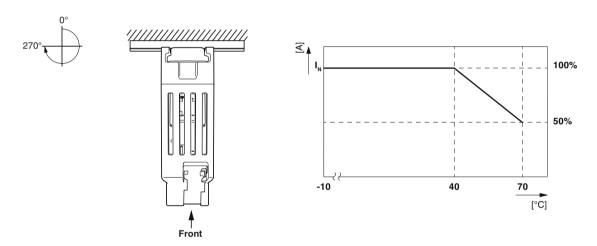

110974\_en\_00 Phoenix Contact 24/25

# 13 Application example

The individual performance classes of the STEP POWER power supplies have been designed such that the different housing widths are dimensioned in complete horizontal pitches (DIN 43880). Here, one horizontal pitch (1 HP) is 18 mm.


You can therefore install any possible combination in surface-mounted or flush mounted distributors (VDE 0603-1, DIN 43871).



The procedure for mounting the power supply in a surface-mounted or flush-mounted distributor is identical to that for DIN rail mounting (see section: Mounting the power supply).

### 13.1 Power supply in a surface-mounted or flushmounted distributor

Figure 23 Schematic diagram, STEP POWER (4 HP) in a flush-mounted distributor (12 HP)

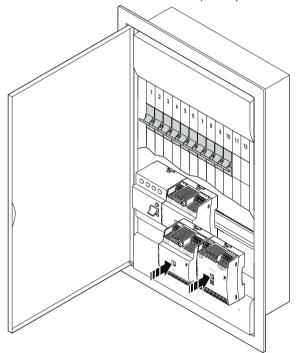

# 14 Disposal and recycling



# Ensure the correct disposal of electronic components

Do not dispose of the power supply as household waste.

Observe the applicable national standards and regulations.



### Ensure correct disposal or recycling

Dispose of or recycle packaging material that is no longer needed as household waste.

Observe the applicable national standards and regulations.