

# Autonics COUNTER / TIMER FXS SERIES INSTRUCTION MANUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

## Safety Considerations

- ※Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ※Safety considerations are categorized as follows.
- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.
- ※The symbols used on the product and instruction manual represent the following
  - ⚠ symbol represents caution due to special circumstances in which hazards may occur.
- Warning**
  - Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
  - Failure to follow this instruction may result in fire, personal injury, or economic loss.
  - Install on a device panel to use.
  - Do not connect, repair, or inspect the unit while connected to a power source.
  - Failure to follow this instruction may result in electric shock or fire.
  - Check 'Connections' before wiring.
  - Failure to follow this instruction may result in fire.
  - Do not disassemble or modify the unit.
  - Failure to follow this instruction may result in electric shock or fire.

## Caution

- When connecting the power/sensor input and relay output, use AWG 20(0.50mm<sup>2</sup>) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.
- Use the unit within the rated specifications.
- Use dry cloth to clean the unit, and do not use water or organic solvent.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
- Keep metal chip, dust, and wire residue from flowing into the unit.

## Model



Model	Display digit	Size	Output	Power supply
FX4S-1P2	9999	DIN W48×H48mm	1-stage setting	24VAC 50/60Hz, 24-48VDC
FX4S-1P4	(4-digit)			100-240VAC 50/60Hz
FX5S-12	99999	DIN W48×H48mm	Indicator	24VAC 50/60Hz, 24-48VDC
FX5S-14	(5-digit)			100-240VAC 50/60Hz

## Specifications


Model	1-stage setting	FX4S-1P2	FX4S-1P4	FX5S-12	FX5S-14
Display digit	Indicator	4-digit	4-digit	5-digit	5-digit
Character size (W×H)		3.8×7.6mm	3.8×7.6mm	4×8mm	4×8mm
Power supply		24VAC~50/60Hz, 24-48VDC	100-240VAC~50/60Hz	24VAC~50/60Hz, 24-48VDC	100-240VAC~50/60Hz
Permissible voltage range		90 to 110% of rated voltage			
Power consumption		AC: Max. 3.5VA, DC: Max. 2.3W	Max. 4.6VA	AC: Max. 3VA, DC: Max. 1.8W	Max. 3.8VA
Max. counting speed of CP1/CP2		Selectable 1cps/30cps/2kcps/5kcps (DIP switch)			
Return time		Max. 500ms			
Min. signal width		INHIBIT, RESET input: approx. 20ms			
Input method		Selectable voltage input (PNP) method or no-voltage input (NPN) method [Voltage input (PNP) method]-input impedance: Max. 10.8kΩ, [H]: 5-30VDC, [L]: 0-2VDC			
One-shot output time		0.05 to 5 sec			
Control output	Contact	Type: Instantaneous SPDT (1c)			
	Solid state	Type: NPN open collector: 1			
	Capacity	Max. 30VDC= 100mA			
Relay life cycle	Mechanical	Min. 5,000,000 operations			
	Electrical	Min. 100,000 operations (250VAC 3A resistive load)			
Repeat/Set/Voltage/Temp. error		Max. ±0.01% ±0.05 sec			
Insulation resistance		Over 100MΩ (at 500VDC megger)			
External power supply		Max. 12VDC= ±10% 50mA			
Memory retention		Approx. 10 years (non-volatile memory)			
Dielectric strength		2,000VAC 50/60Hz for 1 min (between all terminals and case)			
Noise immunity	AC voltage	±2kV the square wave noise (pulse width 1μs) by noise simulator			
	AC/DC voltage	±500V the square wave noise (pulse width 1μs) by noise simulator			
Vibration	Mechanical	0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour			
	Malfunction	0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 minutes			
Shock	Mechanical	300m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times			
	Malfunction	100m/s <sup>2</sup> (approx. 10G) in each X, Y, Z direction for 3 times			
Environment	Ambient temp.	-10 to 55°C, storage: -25 to 65°C			
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH			
Protection structure		IP20 (front part, IEC standard)			
Approval		CE, UL, etc.			
Weight		Approx. 17g (approx. 110g)	Approx. 156g (approx. 95g)		

※1: The weight includes packaging. The weight in parenthesis is for unit only.  
 ※Environment resistance is rated at no freezing or condensation.

## Dimensions

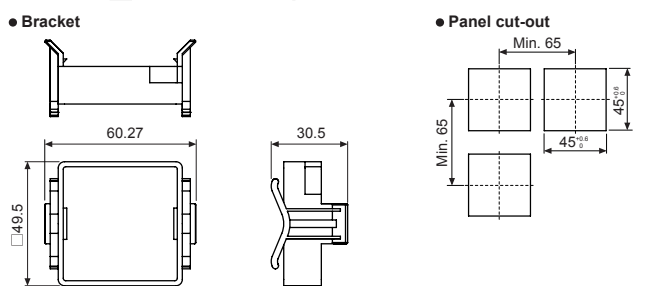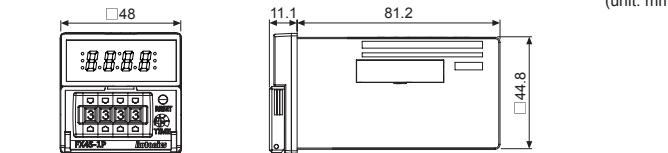


## Connections

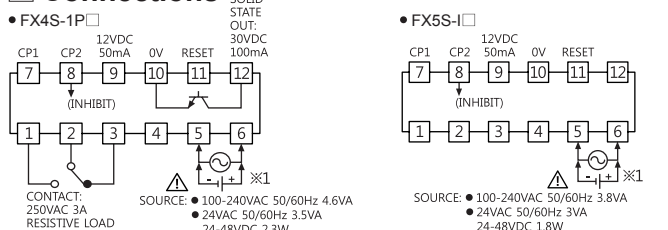

- ※1: AC voltage: 100-240VAC 50/60Hz 4.6VA/3.8VA
- AC/DC voltage: 24VAC 50/60Hz 3.5VA/3VA, 24-48VDC 2.3W/1.8W
- ※INHIBIT: In case of timer mode, this terminal is for time hold.
- (Voltage input (PNP): connect with 12VDC, non-voltage input (NPN): connect with 0VDC)
- ※The above specifications are subject to change and some models may be discontinued without notice.
- ※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

## Detaching DIP Switch Cover


※Turn OFF the power before detaching the DIP switch cover.

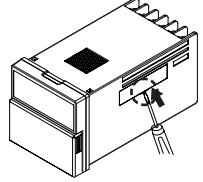

Push and pull the groove of DIP switch cover with a flat head driver to the front. The cover is detached from the case.  
 ⚠ Be sure not to be wounded when using a tool.

## Input Operation Mode (Counter)


※CP: Clock Pulse

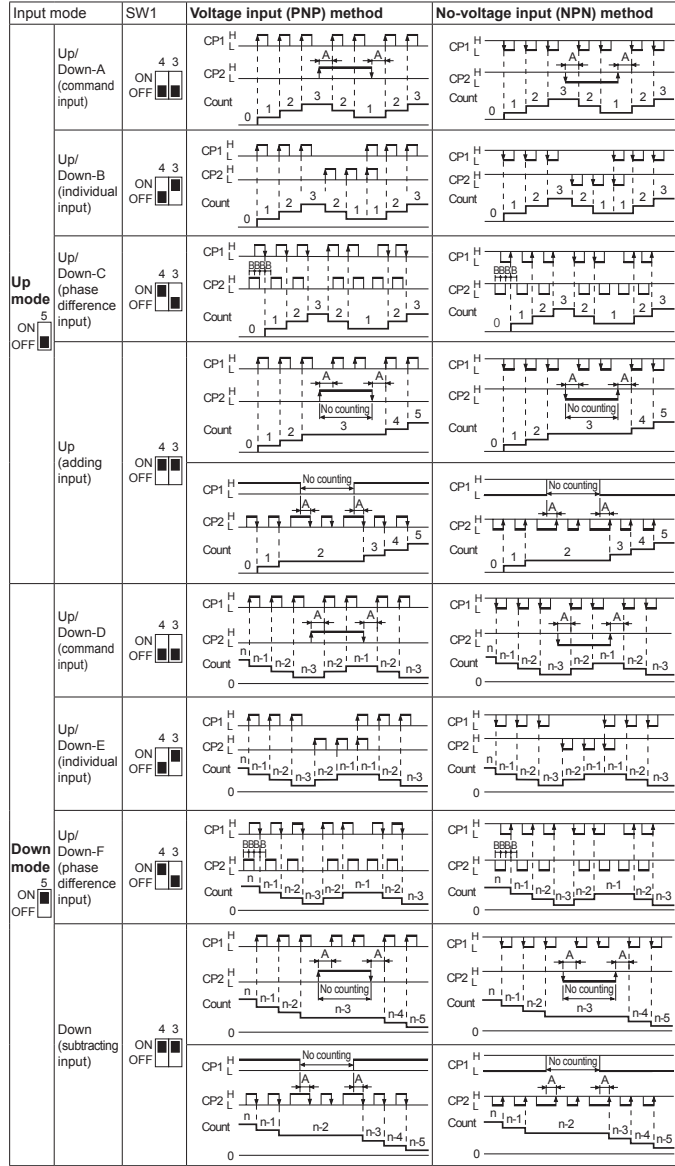

※A: over min. signal width; B: over than 1/2 of min. signal width. If the signal is smaller than these width, it may cause counting error (±1).


## Output Operation Mode

One-shot output (0.05 to 5 sec)      Self-holding output

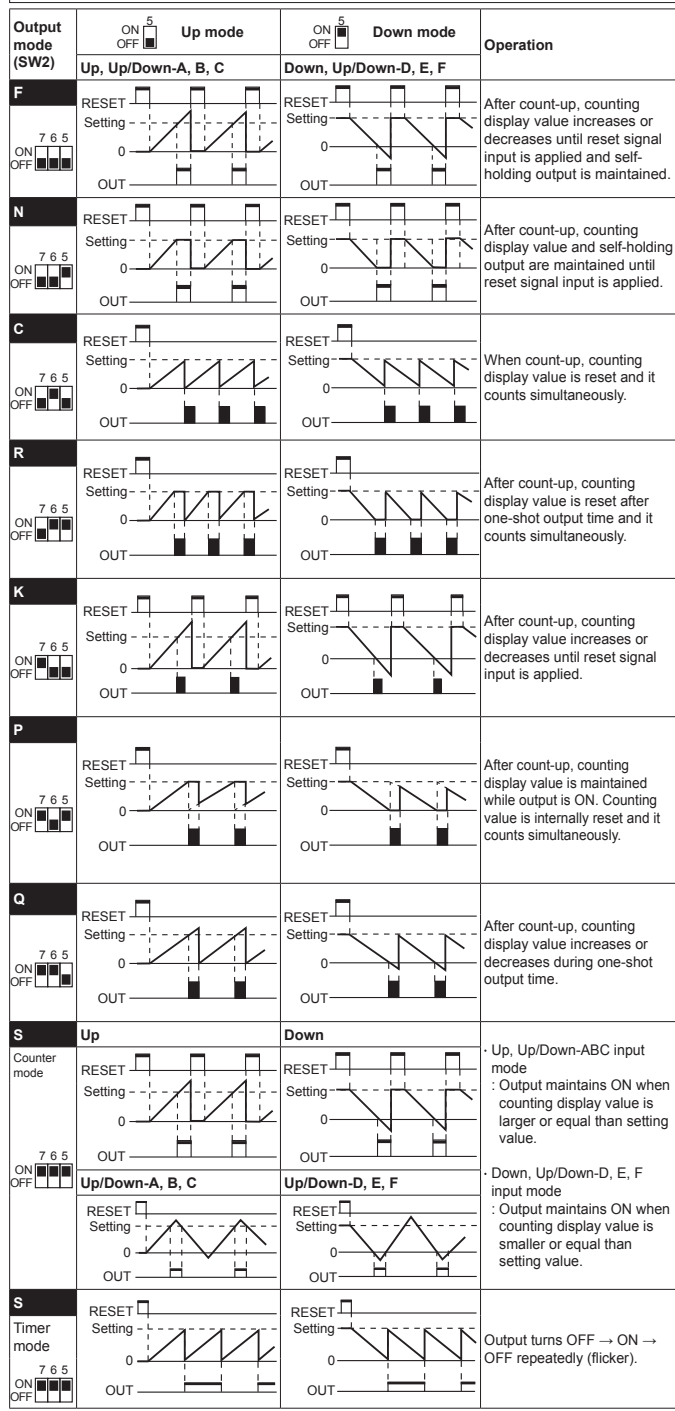

※Set one-shot output time by front TIME volume switch.

## DIP Switch Setting

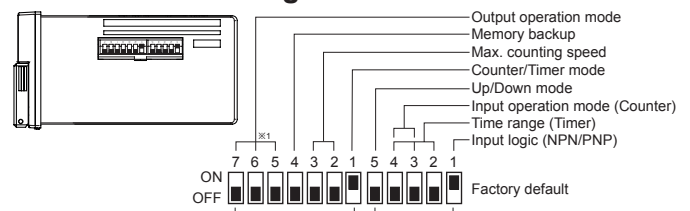


※1: Indicator model (FX5S-1□) does not have no. 5, 6, 7 of SW2 for output operation mode setting.


SW1	Function	SW2	Function
ON	NPN (no-voltage input)	ON	30cps
OFF	PNP (voltage input)	OFF	2kcps
ON	Down mode	ON	5kcps
OFF	Up mode	OFF	1cps
ON	Counter mode	ON	99.99sec
OFF	Timer mode	OFF	9999.9sec
ON	No memory backup	ON	999.9min
OFF	Memory backup	OFF	9999.9min

※How to change settings: Power OFF → change settings → power ON → press [RESET] key or input signal (min. 20ms)


## Input Connection

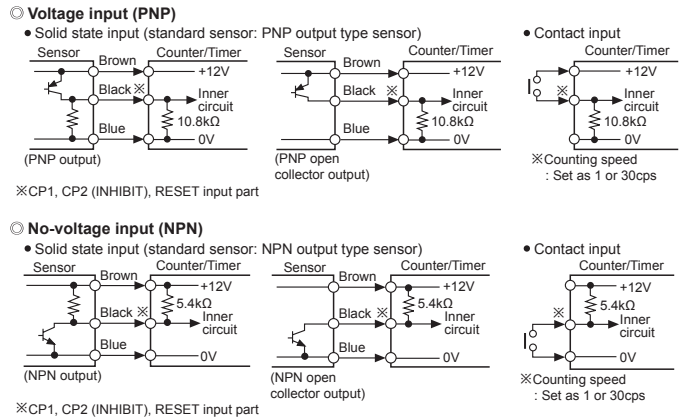

## Counting & Time Operation for Indicator (FX5S-1□)

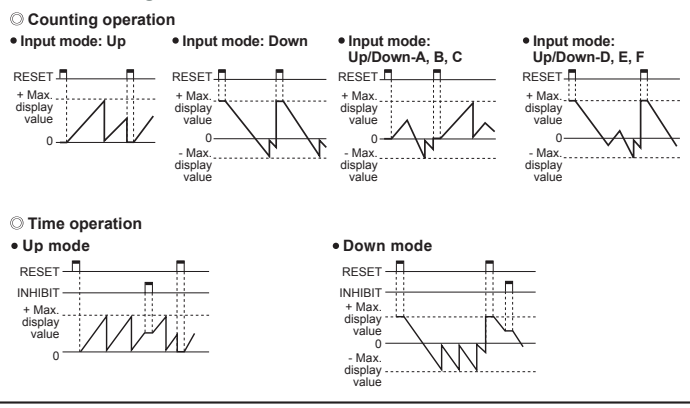

## Dot for Decimal Point / Hour. Min. Second

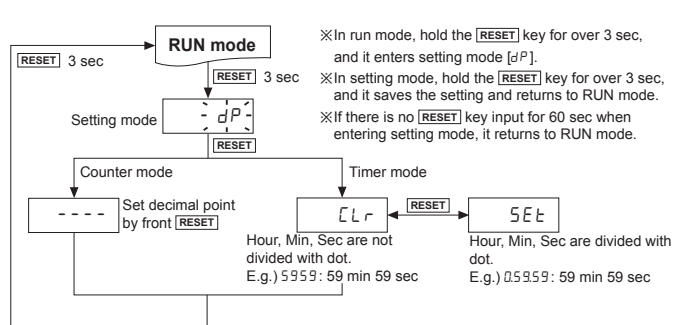

## Error Display and Output Operation

Error Display	Error description	Troubleshooting
Err0	Setting value is 0.	Change the setting value anything but 0.

※When error occurs, the output turns OFF.  
 ※Indicator model does not have error display function.

## Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 24-48VDC, 24VAC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- In case of contact input, set count speed to low speed mode (1cps or 30cps) to operate. If set to high speed mode (2kcps or 5kcps), counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This product may be used in the following environments.
  - ①Indoors (in the environment condition rated in 'Specifications')
  - ②Altitude max. 2,000m
  - ③Pollution degree 2
  - ④Installation category II

## Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- Field Network Devices
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSR/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

**Autonics Corporation**  
<http://www.autonics.com>  
 HEAD QUARTERS:  
 18, Bansong-ro 513 beon-gil, Haundae-gu, Busan, South Korea, 48002  
 TEL: 82-51-519-3232  
 E-mail: sales@autonics.com