Autonics

Threaded/Side Mounting Photoelectric Sensor BH SERIES

INSTRUCTION







Diffuse reflective type Retroreflective type Thank you for choosing our Autonics product.

Please read the following safety considerations before use.

■ Safety Considerations

- %Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ★ Symbol represents caution due to special circumstances in which hazards may occur.

 **The content of the content of th

Marning Failure to follow these instructions may result in serious injury or death.

↑ Caution Failure to follow these instructions may result in personal injury or product damage.


- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster
- ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
 Failure to follow this instruction may result in personal injury, economic loss or fire.


 2. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
 Failure to follow this instruction may result in explosion or fire.

 3. Do not disassemble or modify the unit.

- Do not disassemble or modify the unit.
 Failure to follow this instruction may result in fire.
 Do not connect, repair, or inspect the unit while connected to a power source.
 Failure to follow this instruction may result in fire.
 Check 'Connections' before wiring.
 Failure to follow this instruction may result in fire.

⚠ Caution

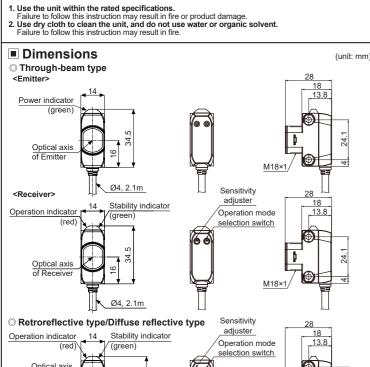

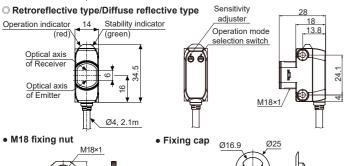

- The above specifications are subject to change and some models may be discording
- X Be sure to follow cautions written in the instruction manual and the technical descriptions

Model

| Model | Sensing distance | Sensing type | Power supply | Output | 1 |
|-----------|------------------|--|----------------|-----------------------------|---|
| BH20M-TDT | 20m | Through-beam type | | | 1 |
| BH4M-PDT | | Retroreflective type (built-in polarized filter) | 11/2_2/11/11/1 | Transistor output (NPN/PNP) | |
| BH1M-DDT | 1m | Diffuse reflective type | | (NPN/PNP) | 1 |
| BH300-DDT | 300mm | Diliuse reliective type | | | 1 |

Specifications

| Model | | BH20M-TDT | BH4M-PDT | BH1M-DDT | BH300-DDT | |
|---------------------------|---------------|--|---|----------------------|----------------------|--|
| Sensing | type | Through-beam | Retroreflective (built-in polarized filter) | Diffuse reflective | | |
| Sensing | distance | 20m | 4m ^{*1} | 1m ^{*2} | 300mm ^{**3} | |
| Sensing | target | Opaque material over Ø20mm | Opaque material over Ø75mm | _ | | |
| Hysteres | sis | — Max. 20% at sensing distance | | | ig distance | |
| Respons | se time | Max. 1ms | | | | |
| Power supply | | 12-24VDC= ±10% (ripple P-P: max. 10%) | | | | |
| Current consumption | | Emitter/Receiver : max. 20mA | Max. 30mA | Max. 35mA | Max. 30mA | |
| Light sou | ırce | Red LED (660nm) | Red LED (660nm) | Infrared LED (850nm) | Red LED (660nm) | |
| Sensitivity adjustment | | Sensitivity adjuster | | | | |
| Operatio | n mode | Light ON / Dark ON selectable by switch | | | | |
| | | NPN / PNP open collector simultaneous 2 output | | | | |
| Control of | output | · Load voltage: max. 26.4VDC · Load current: max. 100mA | | | | |
| | | Residual voltage - NPN: max. 1VDC-, PNP: max. 2.5VDC | | | | |
| Protection | n oirouit | Interference prevention function (except through-beam type), | | | | |
| FIOLECTIC | on circuit | Power reverse polarity protection circuit, Output short over current protection circuit | | | | |
| Indicator | | Operation indicator: red LED, | | | | |
| | | Stability indicator: green LED (emitter of through-beam type's power indicator: green) | | | | |
| | | Cable type | | | | |
| | | Over 20MΩ (at 500VDC megger) | | | | |
| Dielectric strength | | 1,000VAC 50/60Hz for 1 minute | | | | |
| Vibration | | 1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours | | | | |
| Shock | | 500m/s² (approx. 50G) in X, Y, Z direction for 3 times | | | | |
| / | Ambient illu. | Sunlight: max. 11,000lx, Incandescent lamp: max. 3,000lx (receiver illumination) | | | | |
| Environ- Ambient temp | | 4-25 to 55°C, storage: -40 to 70°C | | | | |
| | | 1.35 to 85%RH, storage: 35 to 85%RH | | | | |
| | | IP67 (IEC standard) | | | | |
| | | Case: polycarbonates, LED indicator: polycarbonates, | | | | |
| Material | | sensing part: polymethyl methacrylate acrylic | | | | |
| 0-1-1- | | Ø4mm, 4-wire, 2.1m (emitter of through-beam type: Ø4mm, 2-wire, 2.1m) | | | | |
| Cable | | (AWG24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1.03mm) | | | | |
| Acce- ssory | Common | Adjustment screwdriver, fixing bracket, M18 fixing | B fixing cap: 2, M3 bolt: 2, M3 nut: 2 | | | |
| | | nut: 2, fixing cap: 2, M3 bolt: 4, M3 nut: 4 | | | | |
| | Individual | _ | Reflector (MS-2A) | | | |
| Approval | | C€, c®s dates | | | | |
| Weight ^{*5} | | Approx. 190g (approx. 120g) | Approx. 140g (approx. 60g) | Approx. 130g (appr | ox. 60g) | |

X1: The sensing distance is specified with using the MS-2A reflector. The distance between the sensor and the reflector should be set over 0.1m. When using reflective tapes, the reflectivity will vary by the size of the tape.

Please refer to the catalog or web site.

X2: Non-glossy white paper 300×300mm.X4: UL approved surrounding air temperature 40°C X3: Non-glossy white paper 100×100mm

%5: The weight includes packaging. The weight in parenthesis is for unit only.

%The temperature or humidity mentioned in Environment indicates a non freezing or condensation.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.


**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging. The weight in parenthesis is for unit only.


**The weight includes packaging. The weight in parenthesis is for unit only.

**The weight includes packaging.

■ Control Output Diagram

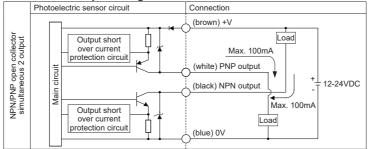

XIf short-circuit the control output terminal or supply current over the rated specification normal control signal is not output due to the output short over current protection circuit

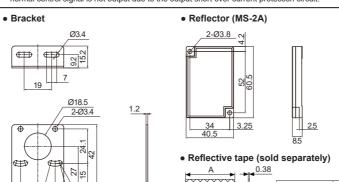


Model

MST-50-10

MST-200-2

MST-100-5 □100

□50

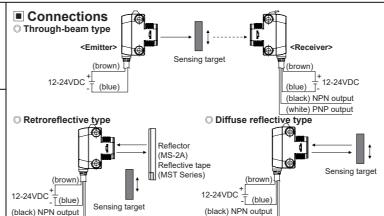

Installation and Sensitivity Adjustment

© For mounting Please use M18 fixing nut or M3 bolt and nut to mount the sensor, and make sure that the tightening

(white) PNP output

orque is under 0.5N·m When using the reflective type photoelectric sensors closely over three units, it may result in

malfunction due to mutual interference. When using the through-beam type photoelectric sensors closely over two units, it may result in malfunction due to mutual interference.

*Exercise caution. Do not apply excessive impact to the unit or bend the cable section.

The inside unit may be wet. M18 Fixing Nut M18 Fixing Nut M3 Nut

Operation mode selecting

(white) PNP output

| p | | | | | |
|--|-------------|---|--|--|--|
| Light ON | D/0 L/0: | Turn the operation mode selection switch to L/O direction (the end of right). | | | |
| Dark ON | OVO. | Turn the operation mode selection switch to D/O direction (the end of left). | | | |
| YEar through beam type, the quitable built in the receiver | | | | | |

Optical axis adjustment Through-beam type

Set the emitter and the receiver facing each other and adjust these up-down, right-left after to check the point operating the stability indicator. Fix the


Retroreflective type

Set the photoelectric sensor and the reflector (MS-2A) or reflective tape facing each other and adjust the reflector up down, right-left after to check the point operating the stability indicator. Make sure that the sensing side of the sensor is parallel with the reflector.

Diffuse reflective type

After place a sensing target, fix it in the middle of position where the stability indicator operates adjusting the sensor to up-down, right-left. Make sure that the sensing side of the sensor is parallel with the surface of each sensing target.

Sensitivity adjustment

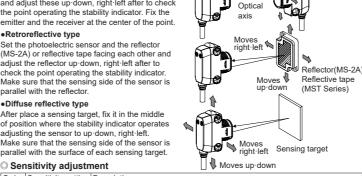


Moves up-down Moves right let

Order | Sensitivity setting | Descriptions From Light ON status, turn the sensitivity setting adjuster slowly to the right from min. sensitivity (-) and check the position where operation indicator turns on (A).

From Dark ON status, turn the sensitivity setting adjuster further right and check the position where the operation indicator turns on (B). Turn the adjuster left and check the position where the operation indicator turns off (C) XIf the operation indicator does not turn on at max. sensitivity (+), the maximum sensitivity setting is set at position (C).

Set the adjuster at the center position between (A) and (C) for optimal sensitivity. Also, check if the stability indicator turns off with or without the sensing target.

If it does not turn off, please review the operation mode again, as sensitivity

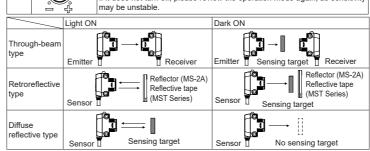


XPlease set the sensitivity setting adjuster is executed in stable Light ON area and the reliability of environment (temperature, supply, dust etc.) is increased after the mounting it in a stable area. XIt may cause breakdown when the sensitivity setting adjuster or the operation mode selection switch is turned by force.

Operation Mode


| - Operation mode | | | |
|-------------------------------|-------------------------------------|--|----------------|
| Operation mode | Light ON | | Dark ON |
| Receiver operation | Received light Interrupted light | | Received light |
| Operation indicator (red LED) | ON OFF | | ON OFF |
| Transistor output (NPN/PNP) | ON OFF | | ON OFF |

Operation Timing Diagram

○ Through-beam type

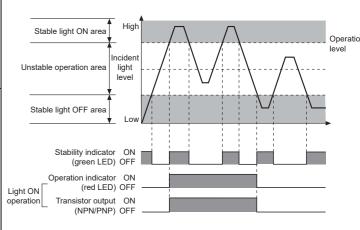

Retroreflective type / Diffuse reflective type

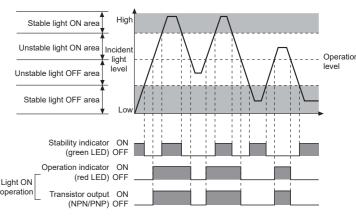

*The waveforms of "Operation indicator" and "Transistor output" are for Light ON, The waveforms are reversed for Dark ON.

Cautions during Use

- 1. Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 2. When connecting a DC relay or other inductive load to the output, remove surge by using diodes or varistors.
- . Use the product, 0.5 sec after supplying power.
- When using separate power supply for the sensor and load, supply power to sensor first.

 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power
- supply device. . Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive
- i. When using switching mode power supply to supply the power, ground F.G. terminal and connect a condenser between 0V and F.G. terminal to remove noise
- . When using sensor with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground F.G. terminal of the equipment
- . This unit may be used in the following environments

■ Temperature Controller

- ①Indoors (UL Type 1 Enclosure)
- ②Altitude max. 2,000m
- ③Pollution degree 3
- (4) Installation category II

Major Products



- itching Mode Power
- ntrol Switches/Lamps/Buzzers
- O Terminal Blocks & Cables
- epper Motors/Drivers/Motion Con aphic/Logic Panels

http://www.autonics.com HEADQUARTERS Korea, 48002 TEL: 82-51-519-3232

Autonics Corporation

DRW160440AG