



**DMU430B**

**ADVANCED ultrasonic sensors with analog output**

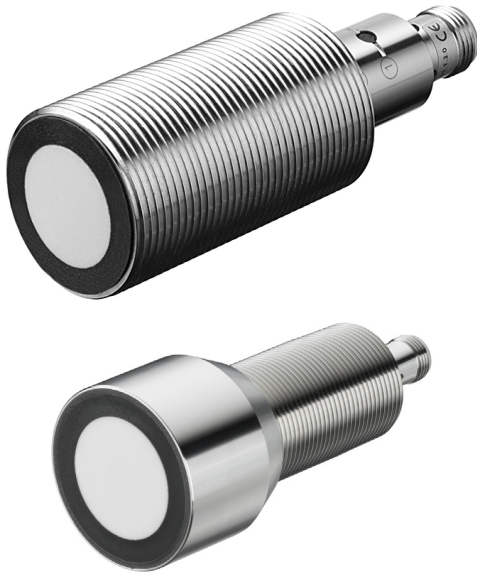

**Dimensioned drawing**

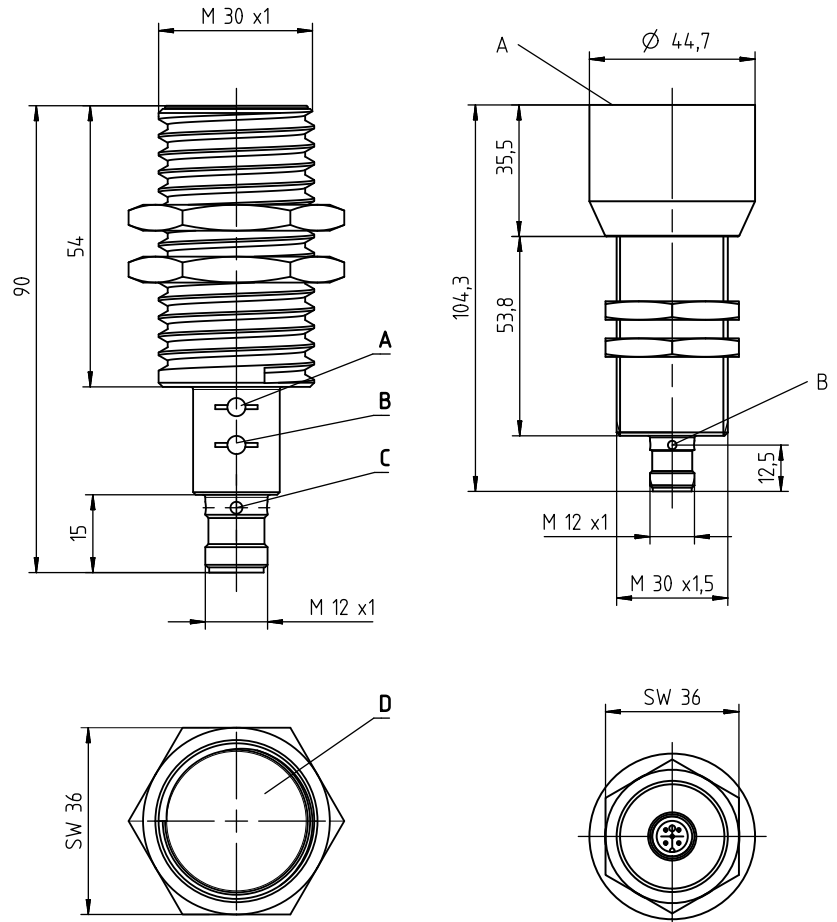


- A** Control button 2
- B** Control button 1
- C** Indicator diodes
- D** Active sensor surface


- A** Active sensor surface
- B** Indicator diodes

**Electrical connection**

DMU430B-...X3/LTV-M12  
DMU430B-...X3/LTC-M12

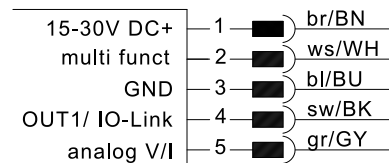


DMU430B-.../4TC-M12  
DMU430B-.../4TV-M12

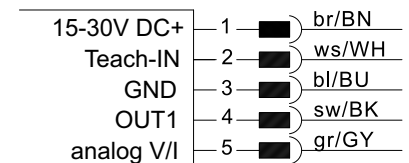

Factory setting for pin 2 **multi funct**: teach input

en 04-2019/05/14 50125025-01

We reserve the right to make changes • PAL\_DMU430B3LTV\_C\_en\_50125025.fm

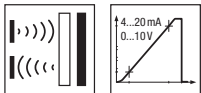

**300 ... 3000mm**  
**600 ... 6000mm**



- Function largely independent of surface properties, ideal for detection of liquids, bulk materials, transparent media, ...
- Small design at long operating range
- Temperature-compensated range and measurement range
- 1 PNP switching output (NPN) and 1 analog output 0 ... 10V / 4 ... 20mA
- **NEW** – Both outputs can easily be taught using a button
- **NEW** – Stable all-metal design
- **NEW** – Process data and configuration via IO-Link interface
- **NEW** – Five operating modes: scanning, synchronous, multiplex, activation and throughbeam operation



**Accessories:**

(available separately)

- Mounting systems
- Cables with M12 connector (K-D ...)
- USB IO-Link master 2.0 (Part no. 50121098)

Technical data

Ultrasonic specifications

Operating range <sup>1)</sup>  
 Adjustment range  
 Ultrasonic frequency  
 Typ. opening angle  
 Resolution of switching output  
 Resolution of analog output  
 Direction of beam  
 Accuracy (analog output)  
 Reproducibility  
 Switching hysteresis (OUT1)  
 Temperature drift

DMU430B-3000.X3/...

300 ... 3000mm <sup>2)</sup>  
 300 ... 3000mm  
 120kHz  
 15°  
 1mm  
 0.1mm  
 Axial  
 ± 0.5% of end value <sup>1)</sup>  
 ± 0.15% of end value <sup>1)</sup>  
 25mm  
 ± 1.5% of end value <sup>1)</sup>

DMU430B-6000/...

600 ... 6000mm <sup>2)</sup>  
 600 ... 6000mm  
 75 kHz

1 mm

Sensor operating modes

IO-Link  
 SIO

COM2 (38.4kBaud)  
 Is supported

Time behavior

Switching frequency  
 Response time  
 Readiness delay

4Hz  
 125ms  
 < 300ms  
 1,6Hz  
 380ms

Electrical data

Operating voltage  $U_B$  <sup>3)</sup>

Residual ripple  
 Open-circuit current  
 Switching output

SIO mode: 15 ... 30V DC (incl. ± 10% residual ripple),  
 COM2 mode: 18 ... 30V DC (incl. ± 10% residual ripple)  
 ± 10% of  $U_B$   
 ≤ 50mA

Function (PNP)  
 Output current

OUT1: 1 x PNP transistor output,  
 IO-Link SIO mode  
 NO contact, reversible  
 SIO mode: max. 150mA per contact,  
 COM2 mode: max. 100mA per contact  
 OUT1: control button 1 or teach input  
 OUT1: control button 1 or teach input  
 Voltage output 0 ... 10V, teachable, configurable,  
 current output 4 ... 20mA, teachable, configurable  
 Distance too small: approx. 3.8mA,  
 Distance too large: approx. 11V / approx. 21mA

Switching range adjustment  
 Changeover NO/NC  
 Analog output

...TV  
 ...TC

Error signal (analog output)

Indicators

Yellow LED  
 Yellow LED, flashing

Green LED  
 Green LED flashing  
 Yellow and green LEDs flash

OUT1: object detected  
 Teach-in / teaching error for 1-point Teach /  
 cable short circuit  
 Object within the operating range  
 IO-Link communication  
 Teach-in/teaching error for window-teach

Mechanical data

Housing  
 Weight  
 Ultrasonic transducer  
 Connection type  
 Installation position

All metal - brass, nickel-plated  
 110g  
 240g  
 Piezoceramic <sup>4)</sup>  
 M12 connector, 5-pin  
 Any

Environmental data

Ambient temp. (operation/storage)

-25°C ... +70°C/  
 -40°C ... +85°C  
 -25°C ... +50°C/  
 -40°C ... +85°C



Protective circuit <sup>5)</sup>  
 VDE protection class  
 Degree of protection  
 Standards applied  
 Certifications

1, 2, 3  
 III  
 IP 67 and IP 68  
 EN 60947-5-2  
 UL 508, C22.2 No.14-13 <sup>3)</sup> <sup>6)</sup> <sup>7)</sup>




- 1) At 20°C
- 2) Target: 100mm x 100mm plate
- 3) For UL applications: use is permitted exclusively in Class 2 circuits according to NEC
- 4) The ceramic material of the ultrasonic transducer contains lead zirconium titanate (PZT)
- 5) 1=short-circuit and overload protection, 2=polarity reversal protection, 3=wire break and inductive protection
- 6) These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.5A min, in the field installation, or equivalent (categories: CYJV/CYJV7 or PVVA/PVVA7); Use tool for buttons
- 7) Ambient temperature 85°C. Use same voltage supply for all circuits.

Diagrams

DMU430B-3000...-M12

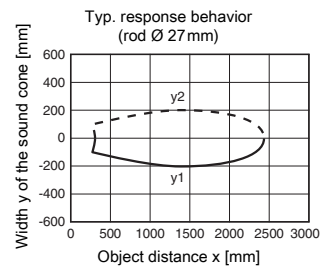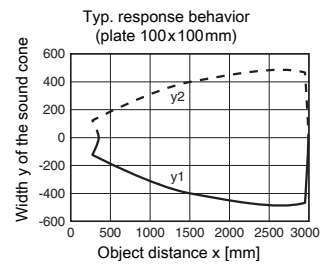

DMU430B-6000...-M12

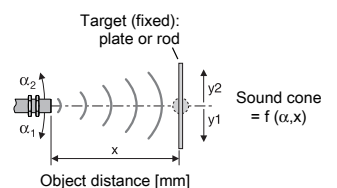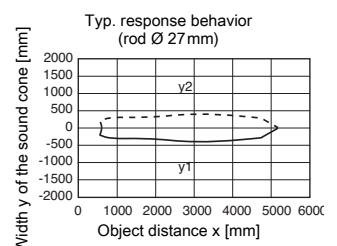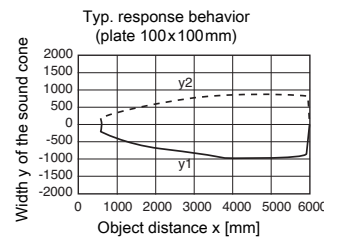

Notes

Observe intended use!

- ⚠ This product is not a safety sensor and is not intended as personnel protection.
- ⚠ The product may only be put into operation by competent persons.
- ⚠ Only use the product in accordance with its intended use.

# DMU430B

## ADVANCED ultrasonic sensors with analog output

### Part number code

DMU430B-3000.X3/LTV-M12

#### Operating principle

**HTU** Ultrasonic sensor, scanning principle, with background suppression  
**DMU** Ultrasonic sensor, distance measurement

#### Series

**430B** 430B Series, cylindrical M30 construction

#### Operating range in mm

**3000** 300 ... 3000  
**6000** 600 ... 6000

#### Equipment (optional)

**X** "Advanced" design  
**3** Teach button on the sensor

#### Pin assignment of connector pin 4 / black cable wire (OUT1)

**4** PNP output, NO contact preset  
**P** PNP output, NC contact preset  
**L** IO-Link communication or push-pull (SIO)

#### Pin assignment of connector pin 2 / white cable wire (Teach-IN)

**T** Teach input

#### Pin assignment of connector pin 5 / gray cable wire (OUT2)

**4** PNP output, NO contact preset  
**P** PNP output, NC contact preset  
**V** Analog voltage output 0 ... 10V  
**C** Analog current output 4 ... 20mA  
**X** Connection not assigned (n. c.- not connected)

#### Connection technology

**M12** M12 connector, 5-pin

### Order guide


The sensors listed here are preferred types; current information at [www.leuze.com](http://www.leuze.com).

	Designation	Part no.
<b>Operating range / Analog output</b>	300 ... 3000mm / 0 ... 10V	DMU430B-3000.X3/LTV-M12 50124266
	300 ... 3000mm / 4 ... 20mA	DMU430B-3000.X3/LTC-M12 50124265
	600 ... 6000mm / 0 ... 10V	DMU430B-6000/4TV-M12 50142211
	600 ... 6000mm / 0 ... 20mA	DMU430B-6000/4TC-M12 50142210

### Device functions and indicators – switching output

The sensor has two buttons for adjusting switching output **OUT1** and analog output **OUT2**. Alternatively, all adjustments can also be made via **IO-Link**. The **multi funct** teach input can be used to perform the 1-point teach and the changeover of the switching function (NO contact/NC contact).

#### Switching output OUT1

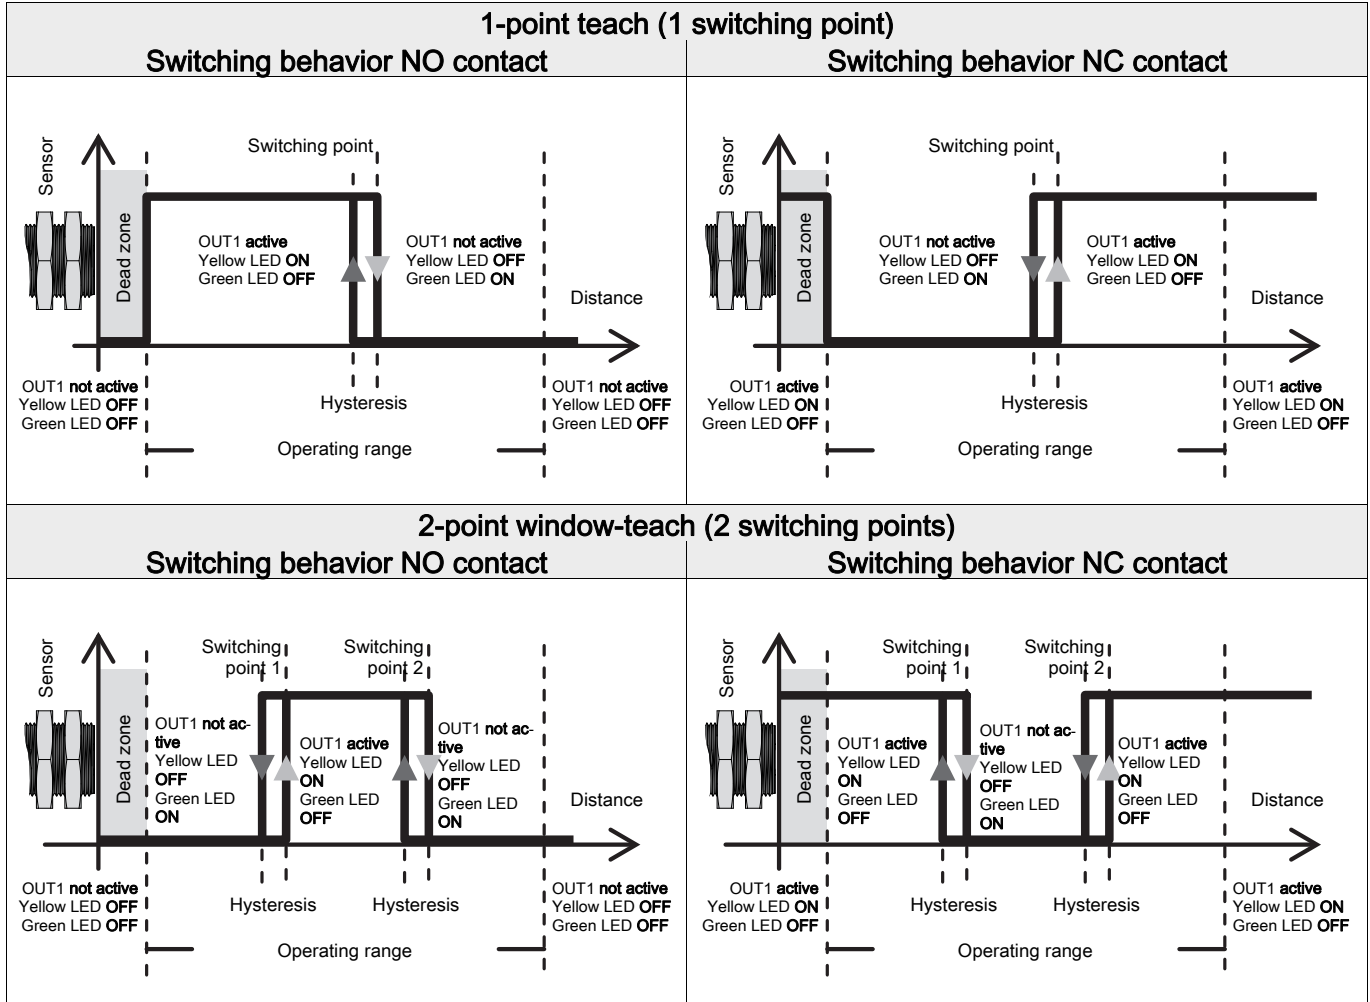

**Note!**  
The switching behavior is not defined in the dead zone.

#### Switching behavior with 2-point window-teach as a function of the switching function

Switching function configured as	First taught object distance	Second taught object distance	Output switching behavior
make-contact (NO) break-contact (NC)	Far	Close	
	Close	Far	



**Note!**  
In measurement operation, the yellow and green LED only indicate the behavior of output **OUT1**. The behavior of output **OUT2** is not indicated.

## Adjustment of the switching points (Teach) using the control buttons

This device setting is only available for sensors in the DMU430B-...X3/... variant.

The switching point of the sensor is set to 3000mm (static 1-point teach) on delivery.

By means of a simple operating procedure, the switching point for the output OUT1 can be individually taught to an arbitrary distance within the operating range with 1-point teach (static) or 2-point window-teach (static).

Moreover, the output function can be switched from NO contact (NO - normally open) to NC contact (NC - normally closed). For the adjustment, **control button 1** is permanently assigned to output **OUT1** (see dimensioned drawing).

1-point teach (static)	2-point window-teach (static) <sup>1)</sup>
1. <b>Place</b> object at desired switching distance.	1. First, <b>place</b> object at desired switching distance for <b>switching point 1</b> .
2. To adjust output <b>OUT1</b> , <b>press button 1</b> for <b>2 ... 7s</b> until the <b>yellow LED flashes at 3Hz</b> .	2. To adjust output <b>OUT1</b> , <b>press button 1</b> for <b>7 ... 12s</b> until the <b>yellow and green LED flash alternately at 3Hz</b> .
3. <b>Release the teach button</b> to complete the teach event. The current object distance has been taught as the new switching point.	3. <b>Release the button</b> . The sensor remains in teach mode and the LEDs continue to flash.
4. Error-free teach: <b>LED states and switching behavior</b> according to the diagram shown above. <b>Faulty teach</b> (object may be too close or too far away – please note operating range): <b>yellow LED flashes at 5Hz</b> until an error-free teach event is performed. The affected output is inactive as long as there is a teach error.	4. Then, <b>place</b> the object at the desired switching distance for <b>switching point 2</b> . <b>Note:</b> The <b>minimum distance between the switching points</b> for an operating range of 3000mm is: <b>250mm</b>
	5. <b>Briefly press the teach button</b> again to complete the teach event. The switching window was taught in.
	6. Error-free teach: <b>LED states and switching behavior</b> according to the diagram shown above. <b>Faulty teach</b> (object may be too close or too far away – please note operating range): <b>green and yellow LEDs flash at 8Hz</b> until an error-free teach event is performed.

1) See table "Switching behavior with 2-point window-teach as a function of the switching function"

## Adjusting the switching function (NO/NC) using the control buttons

This device setting is only available for sensors in the DMU430B-...X3/... variant.

**Control button 1** can be used to switch the switching function of output **OUT1** from NO contact to NC contact (or vice versa).

To do this, proceed as follows:

Action / Description	Control button	Indicator diode	
		GREEN	YELLOW
<b>Changeover of the switching function:</b> Switching output <b>OUT1</b> is set as <b>NO contact ex works</b> . If the switching function is changed, the switching output is changed to the opposite state (toggled).	<b>Press button 1</b> of the switching output <b>for longer than 12s</b> .	<b>Both LEDs flash alternately</b> for a short time at 3Hz. If the <b>yellow LED</b> is then <b>ON</b> , the output functions as an <b>NO contact</b> . If the <b>yellow LED</b> is then <b>OFF</b> , the output functions as an <b>NC contact</b> .	




### Note!

For 2-point window-teach, the switching behavior is dependent on the selected object distances for switching points 1 and 2. See previous page!

**Device functions – analog output**

**Analog output OUT2**

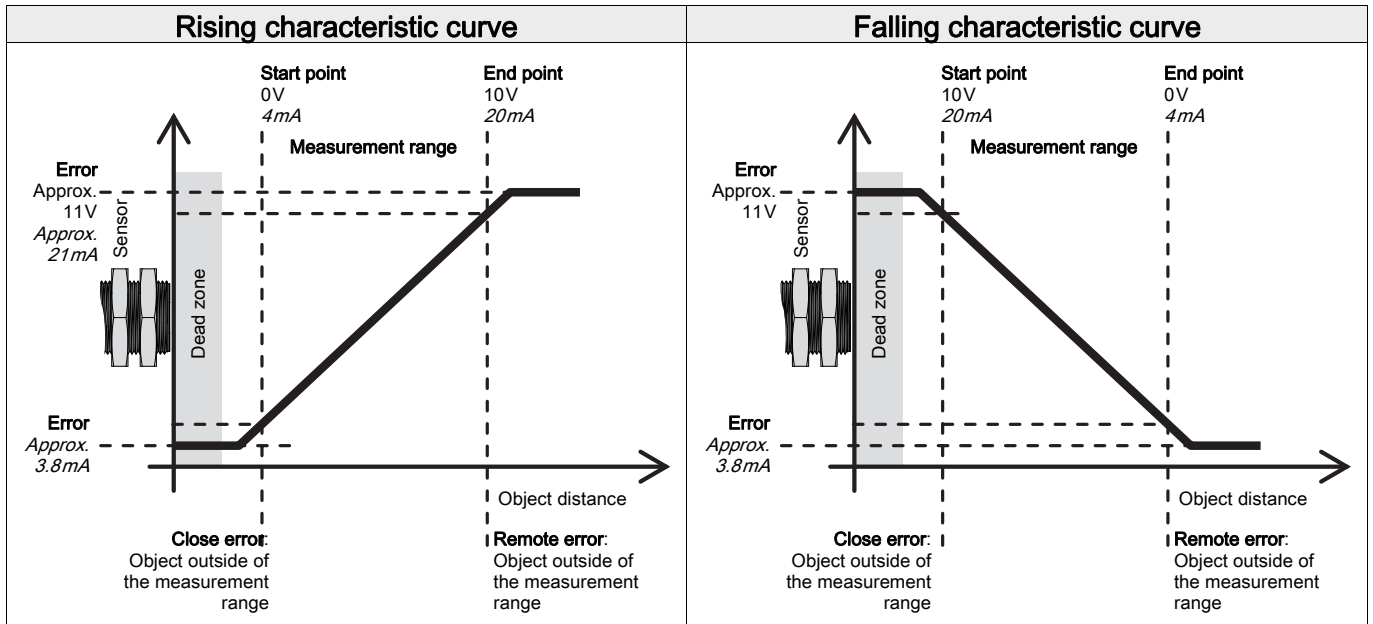

**Characteristic curve behavior as a function of the object distances for start/end of measurement range**

Characteristic curve configured as	First taught object distance	Second taught object distance	Characteristic curve of analog output
Rising characteristic curve	Close	Far	
Falling characteristic curve	Far	Close	



**Note!**

In measurement operation, the yellow and green LED only indicate the behavior of output OUT1. The behavior of output OUT2 is not indicated.

## Adjustment of the analog output (Teach) using the control buttons

This device setting is only available for sensors in the DMU430B-...X3/... variant.

The choice of distances for start of measurement range and end of measurement range can be used to adjust the characteristic curve of the analog output.

If an object is located outside of the taught measurement range, an error signal is output. A different analog signal is output here by the sensor for the errors "distance too close: object outside of the measurement range" and "distance too far: object outside of the measurement range".

Rising characteristic curve <sup>1)</sup>	Falling characteristic curve <sup>1)</sup>
<b>1. Place</b> object at desired distance for the <b>start point of the measurement range</b> .	<b>1. Place</b> object at desired distance for the <b>end point of the measurement range</b> .
<b>2. To adjust</b> analog output <b>OUT2</b> , <b>press button 2</b> for <b>7 ... 12s</b> until the <b>yellow and green LED flash alternately at 3Hz</b> .	<b>2. To adjust</b> analog output <b>OUT2</b> , <b>press button 2</b> for <b>7 ... 12s</b> until the <b>yellow and green LED flash alternately at 3Hz</b> .
<b>3. Release the button</b> . The sensor remains in teach mode and the LEDs continue to flash.	<b>3. Release the button</b> . The sensor remains in teach mode and the LEDs continue to flash.
<b>4. Then, place</b> object at desired distance for the <b>end point of the measurement range</b> . <b>Note:</b> the <b>minimum distance between the start and end point of the measurement range</b> for an operating range of 3000mm is: <b>250mm</b>	<b>4. Then, place</b> object at desired distance for the <b>start point of the measurement range</b> . <b>Note:</b> the <b>minimum distance between the start and end point of the measurement range</b> for an operating range of 3000mm is: <b>250mm</b>
<b>5. Briefly press</b> the <b>teach button</b> again to complete the teach event. The characteristic curve with rising curve has been taught.	<b>5. Briefly press</b> the <b>teach button</b> again to complete the teach event. The characteristic curve with falling curve has been taught.
<b>6. Error-free teach:</b> LED states acc. to table under "Device functions and indicators". <b>Faulty teach:</b> <b>green and yellow LEDs flash at 8Hz</b> until an error-free teach is performed.	<b>6. Error-free teach:</b> LED states acc. to table under "Device functions and indicators". <b>Faulty teach:</b> <b>green and yellow LEDs flash at 8Hz</b> until an error-free teach is performed.

1) See table "Characteristic curve behavior as a function of the object distances for start/end of measurement range"

## Adjusting the sensor via the teach input

This device setting is only available for sensors in the DMU430B-...X3/... variant.

**Multi funct** connection pin 2 is configured ex works as a teach input. Via the teach input, you can

- lock the control buttons.
- perform a 1-point teach (static) of the switching output.
- perform a 2-point window-teach (static) of the switching output.
- perform a 2-point teach of the characteristic curve of the analog output.




Signal level **LOW**  $\leq 0.191 \cdot U_B$  or not connected

Signal level **HIGH**  $\geq 0.809 \cdot U_B$

## Locking of the control buttons

Action	Pin 2 (multi funct)	Description
<b>Locking the control buttons</b>	<b>HIGH signal</b> (permanent)	As long as the HIGH signal is continuously applied, the sensor cannot be adjusted with the control buttons. The control buttons of the sensor are disabled.
<b>Unlocking the control buttons</b>	<b>LOW signal or not connected</b> (permanent)	As long as the LOW signal is continuously applied or pin 2 remains unconnected, the sensor can be adjusted with the control buttons.

Teach of switching output and analog output

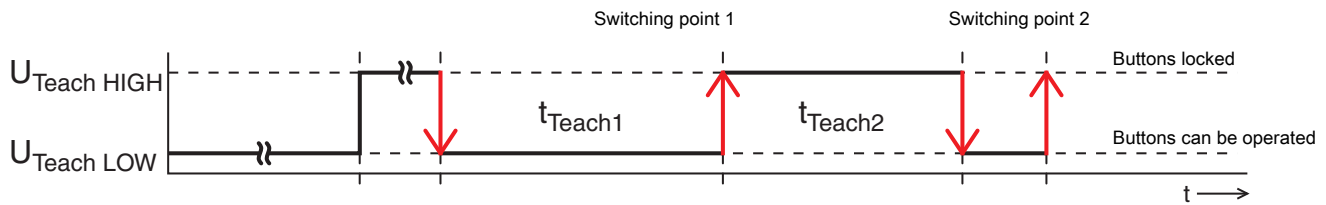

After the delay before start-up ( $\leq 300\text{ms}$ ) has elapsed, the control buttons of the sensor can be operated.

$\geq 20\text{ms}$  Pulse duration  $t_{\text{Teach1}}$  Pulse duration  $t_{\text{Teach2}}$   $20 \dots \infty\text{ms}$   $\geq 20\text{ms}$

<p>Switching output OUT1: <math>t_{\text{Teach1}} = 20 \dots 80\text{ms}</math></p>	<p><b>1-point teach (static)</b></p> <p><b>Place object.</b> The current object distance is taken over as switching point 1 with the rising edge of <math>t_{\text{Teach2}}</math>.</p> <p><b>Do not change the object distance!</b> The falling edge of <math>t_{\text{Teach2}}</math> ends the teach event.</p>
<p>Switching output OUT1: <math>t_{\text{Teach1}} = 120 \dots 180\text{ms}</math></p>	<p><b>2-point window-teach (static)</b></p> <p><b>Place object.</b> The current object distance is taken over as switching point 1 with the rising edge of <math>t_{\text{Teach2}}</math>.</p> <p><b>Sensor remains in teach mode. Change the object distance now!</b> The current object distance is taken over as switching point 2 and the teach event is ended with the falling edge of <math>t_{\text{Teach2}}</math>.</p>
<p>Analog output OUT2: <math>t_{\text{Teach1}} = 120 \dots 180\text{ms}</math></p>	<p><b>2-point teach of analog characteristic (static)</b></p> <p><b>Place object.</b> The current object distance is taken over as the start point of the measurement range with the rising edge of <math>t_{\text{Teach2}}</math>.</p> <p><b>Sensor remains in teach mode. Change the object distance now!</b> The current object distance is taken over as the end point of the measure-</p>



Note!

The procedure is identical for the 2-point window-teach for switching output OUT1 and for the 2-point teach of the characteristic curve of analog output OUT2 via the teach input. The characteristic curve and switching window can only be adjusted independently via the control buttons or the IO-Link interface.

The changeover of the switching function (NC contact/NO contact) and the characteristic curve (rising/falling) is not possible via the teach input.



## DMU430B

### Adjustment of switching point via teach input

This device setting is only available for sensors in the DMU430B-.../4... variant.

The switching point of the sensor is set to 6000mm on delivery.

By means of a simple teach event, the switching point can be taught to an arbitrary distance within the operating range. The Leuze PA1/XTSX-M12 Teach Adapter can be used for this purpose. The adapter can also be used to easily switch the output function from NO contact to NC contact.

1-point teach
1. <b>Place</b> object at desired switching distance.
2. For the adjustment of <b>OUT1</b> , <b>connect</b> input <b>Teach-IN</b> to <b>GND</b> for <b>2 ... 7s</b> (Leuze teach adapter: position "TEACH-GND"). The current state of output <b>OUT1</b> is frozen during the teach event.
3. The <b>yellow LED flashes at 3Hz</b> and is <b>then ON</b> . The current object distance has been taught as the new switching point.
4. Error-free teach: <b>LED</b> states and switching behavior according to the diagram shown above. <b>Faulty teach</b> (object may be too close or too far away – please note operating range): <b>yellow LED flashes at 5Hz</b> until an error-free teach event is performed. The output <b>OUT1</b> is inactive as long as there is a teach error.

### Adjusting the switching function (NC/NO) via teach input<sup>1</sup>

This device setting is only available for sensors in the DMU430B-.../4... variant.

The switching function of the sensor is set to normally open (NO) on delivery.

If the switching function is changed, the switching output is changed to the opposite state (toggled).

Changeover of the switching function
1. To change the switching function, <b>connect</b> input <b>Teach-IN</b> to <b>U<sub>B</sub></b> for <b>2 ... 7s</b> (Leuze teach adapter: position "Teach-U <sub>B</sub> "). The current state of output <b>OUT1</b> is frozen while the adjustment is made.
2. The <b>green and yellow LED flash alternately at 2Hz</b> . The switching function has been reversed. The switching behavior corresponds to the diagram shown above.

### Adjustment of analog output via teach input

This device setting is only available for sensors in the DMU430B-.../4... variant.

The choice of distances for start of measurement range and end of measurement range can be used to adjust the characteristic curve of the analog output.

If an object is located outside of the taught measurement range, an error signal is output. A different analog signal is output here by the sensor for the errors "distance too close: object outside of the measurement range" and "distance too far: object outside of the measurement range".

Rising characteristic curve 1)	Falling characteristic curve 1)
1. <b>Place</b> object at desired distance for the <b>start point of the measurement range</b> .	1. <b>Place</b> object at desired distance for the <b>end point of the measurement range</b> .
2. To adjust <b>OUT2</b> , <b>connect</b> the <b>Teach-IN</b> input to <b>GND</b> for <b>7 ... 12s</b> (Leuze Teach Adapter: position "Teach-GND") until the <b>yellow and green LEDs flash alternately at 3Hz</b> .	2. To adjust <b>OUT2</b> , <b>connect</b> the <b>Teach-IN</b> input to <b>GND</b> for <b>7 ... 12s</b> (Leuze Teach Adapter: position "Teach-GND") until the <b>yellow and green LEDs flash alternately at 3Hz</b> .
3. The sensor remains in teach mode and the LEDs continue to flash.	3. The sensor remains in teach mode and the LEDs continue to flash.
4. Then, <b>place</b> object at desired distance for the <b>end point of the measurement range</b> . <b>Note:</b> the <b>minimum distance between the start and end point of the measurement range</b> for an operating range of 6000mm is: <b>500mm</b>	4. Then, <b>place</b> object at desired distance for the <b>start point of the measurement range</b> . <b>Note:</b> the <b>minimum distance between the start and end point of the measurement range</b> for an operating range of 6000mm is: <b>500mm</b>
5. To complete the teach event, <b>briefly connect</b> the Teach-IN to <b>GND</b> again (Leuze Teach Adapter: position "Teach-U <sub>B</sub> "). The characteristic curve with rising curve has been taught.	5. To complete the teach event, <b>briefly connect</b> the Teach-IN to <b>GND</b> again (Leuze Teach Adapter: position "Teach-U <sub>B</sub> "). The characteristic curve with falling curve has been taught.
6. Error-free teach: LED states acc. to table under "Device functions and indicators". <b>Faulty teach: green and yellow LEDs flash at 8Hz</b> until an error-free teach is performed.	6. Error-free teach: LED states acc. to table under "Device functions and indicators". <b>Faulty teach: green and yellow LEDs flash at 8Hz</b> until an error-free teach is performed.

1) See table "Characteristic curve behavior as a function of the object distances for start/end of measurement range"

## IO-Link interface

This device setting is only available for sensors in the DMU430B-...X3/... variant.

The ultrasonic sensor features an IO-Link interface acc. to specification V1.1. and satisfies the Smart Sensor Profile.

As a result, the sensor can easily, quickly and, thus, economically be configured and diagnostic information read out. With a small amount of effort, the sensor can also be integrated in a control.

### Overview of the configuration options via IO-Link

Function block	Function	Description
<b>Operating mode</b>	Standard operation	The sensor operates as a diffuse sensor with background suppression.
	Multiplex operation	A max. of 10 sensors – 1 master and 9 slaves – can be wired together in a network. To do this, the sensors must be electrically connected with one line. The master generates a timing signal and all networked sensors are activated with time-delay.
	Synchronous operation	A max. of 10 sensors – 1 master and 9 slaves – can be wired together in a network. To do this, the sensors must be electrically connected with one line. The master generates a timing signal and all networked sensors are activated simultaneously.
	Activation operation	The sensor can be activated through an external signal.
	Operation as throughbeam sensor	The sensor can either be configured as a scanner or as a throughbeam sensor. Operation as a throughbeam sensor requires 2 sensors, which are electrically connected through one line.
<b>Switching outputs OUT1 / OUT2</b>	Switching point 1/2	The switching points can be directly entered as distance value in mm.
	Switching output (OUT1 and OUT2)	Adjustment as PNP or NPN switching output.
	Switching function	Adjustment as NC / NO contact. <sup>1)</sup>
	Switching behavior in the case of error	The switching behavior of output OUT1 of the sensor, for objects which are located outside of the operating range, can be adjusted.
	2-point behavior	If a switching output is to operate with 2 switching points, a choice can be made between 2-point window-teach (factory setting) or 2-point teach (e.g. for simple pump controls with minimum and maximum fill levels).
	Delay times	The time module can be used to configure a switch-on or switch-off delay at the output. This delay time is dependent on the update interval of the respective device and is calculated using the following formula: Delay [ms] = Update interval [ms] * Switch-on/-off delay
	Teach switching output OUT1	The switching output OUT1 can be taught via the IO-Link interface.
	Teach offset	An additional or shorter distance at the switching point can be entered directly as a distance value in mm. This parameter applies only for 1-point teach.
	Teach lock	Adjustment for locking of control buttons.
	<b>Analog output OUT2</b>	Analog start value
Analog end value		The distance for the end point of the measurement range can be entered directly in mm.
Direction of the characteristic curve		Configuration option for rising or falling characteristic curve.
Output range		For devices with voltage output: 0 ... 10V (factory setting); 0 ... 5V; 1 ... 6V. For devices with current output: 4 ... 20mA (factory setting); 0 ... 20mA.
<b>Temperature</b>	Temperature compensation	Adjustment option for internal (sensor works with the integrated temperature sensor) or external (with a constant application temperature, this can be manually entered. The sensor then compensates the measured values at a fixed rate with this temperature).
	Unit	Adjustment option to °C or °F.
	Temperature value	Entry temperature value in °C or °F (if external temperature compensation is desired).

1) NO contact: normal switching behavior (not inverted switching);  
NC contact: inverted switching behavior (inverted switching).

In addition to the configuration functions, a range of sensor information, such as sensor status, sensor diagnostics as well as the process data, can be called up.

Further information and the device-specific description of the IO-Link interface (IODD) can be found on the Internet at [www.leuze.com](http://www.leuze.com) in the **Downloads** area of the respective sensor.